

 **JAMES BAROUD**


EN INSTALLATION GUIDE

FR Guide d'installation

DE Installationsanleitung




ES Guía de instalación

PT Guia de instalação





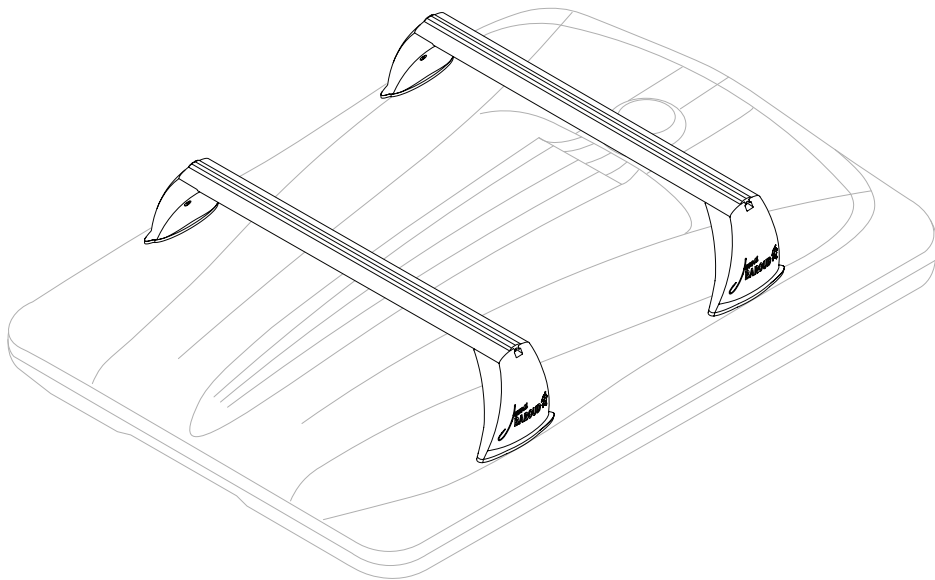


Frontier Cross Bars


ASSEMBLY

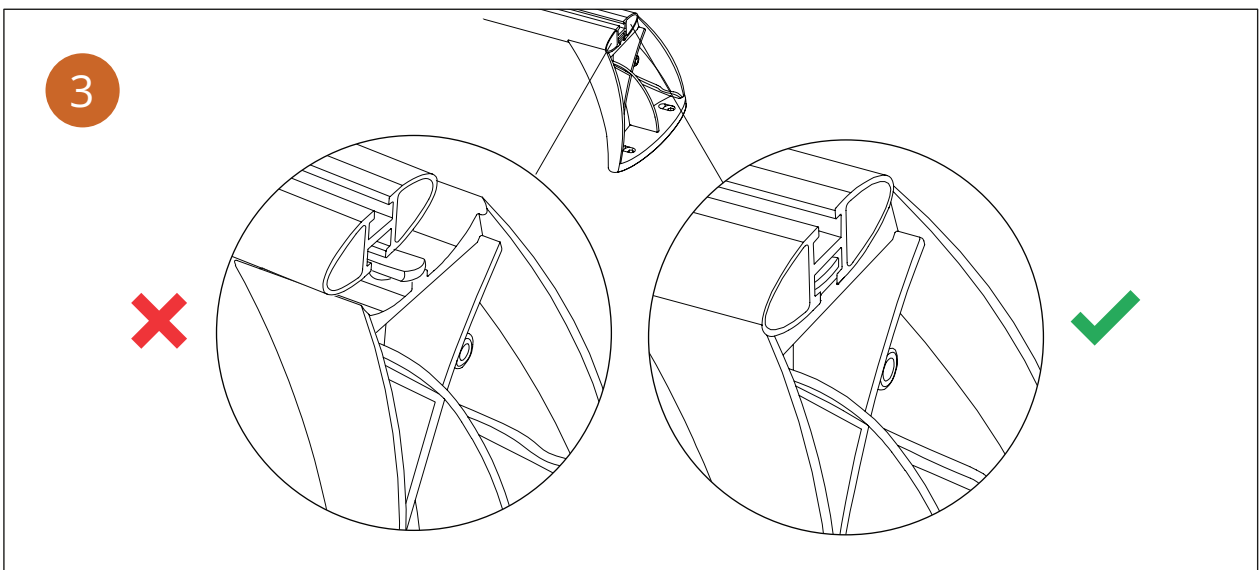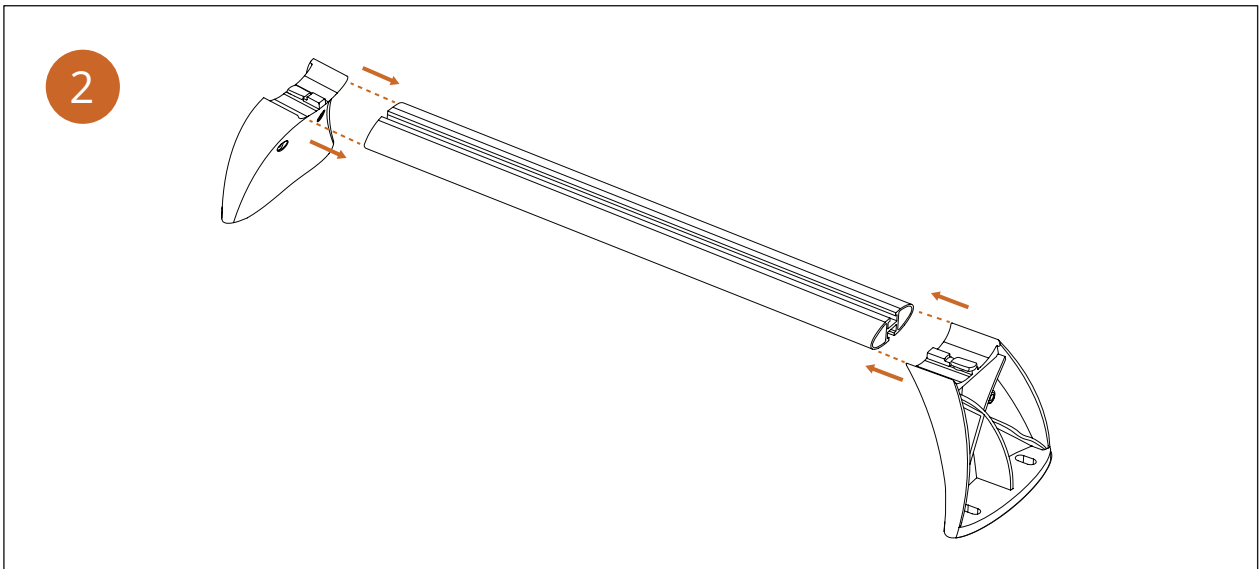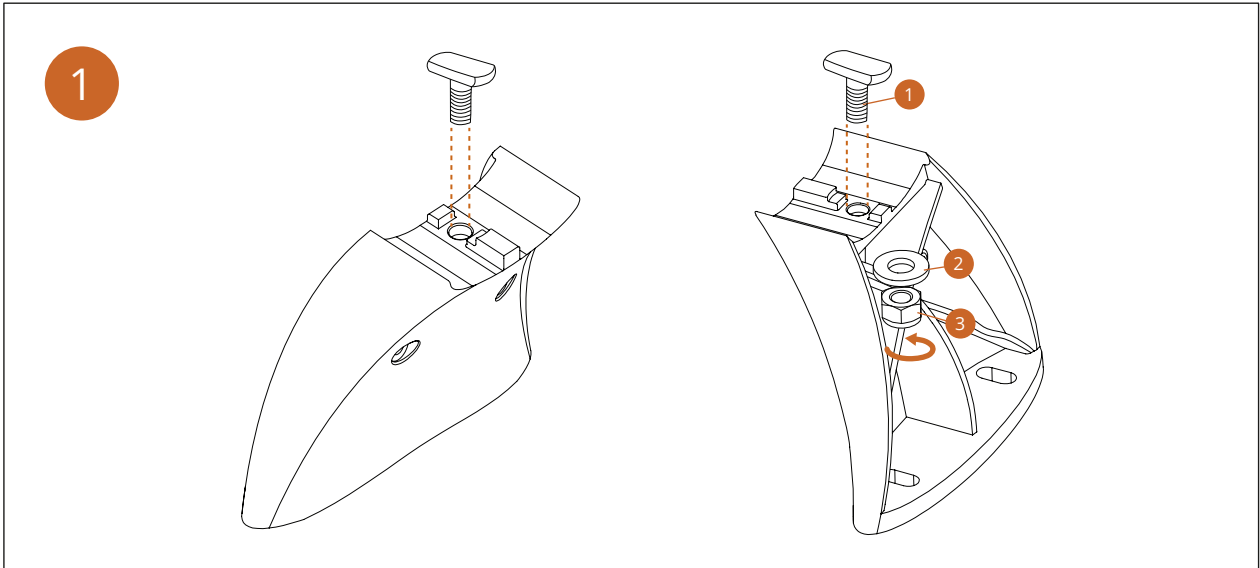

ASSEMBLY

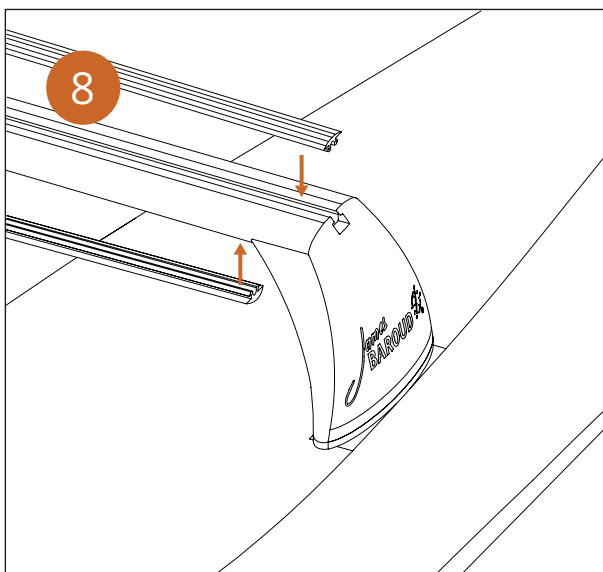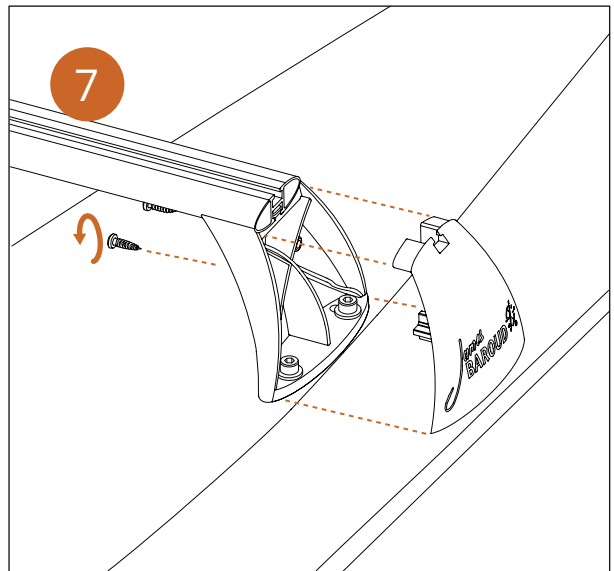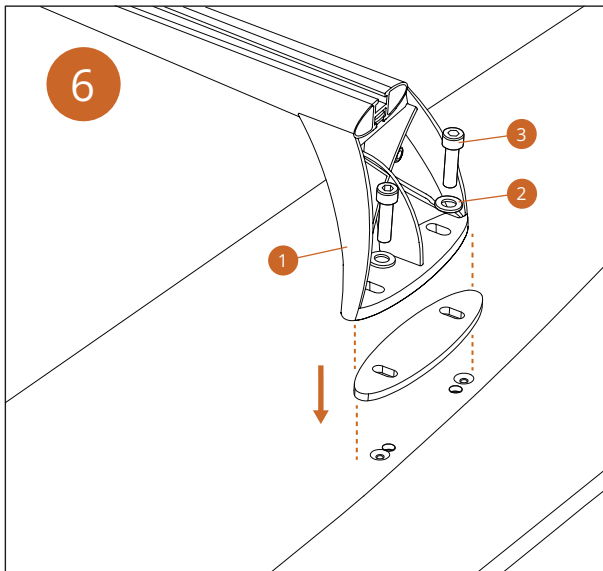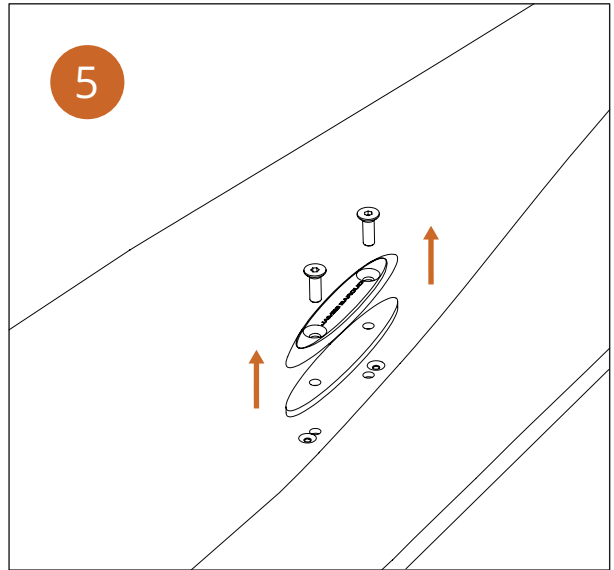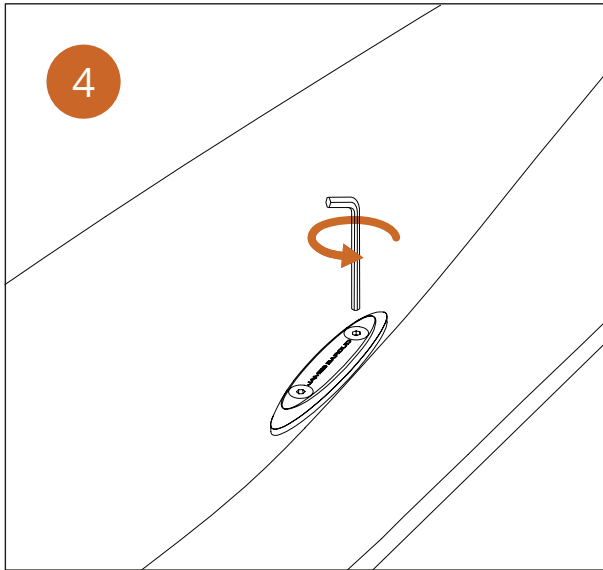

COMPONENTS

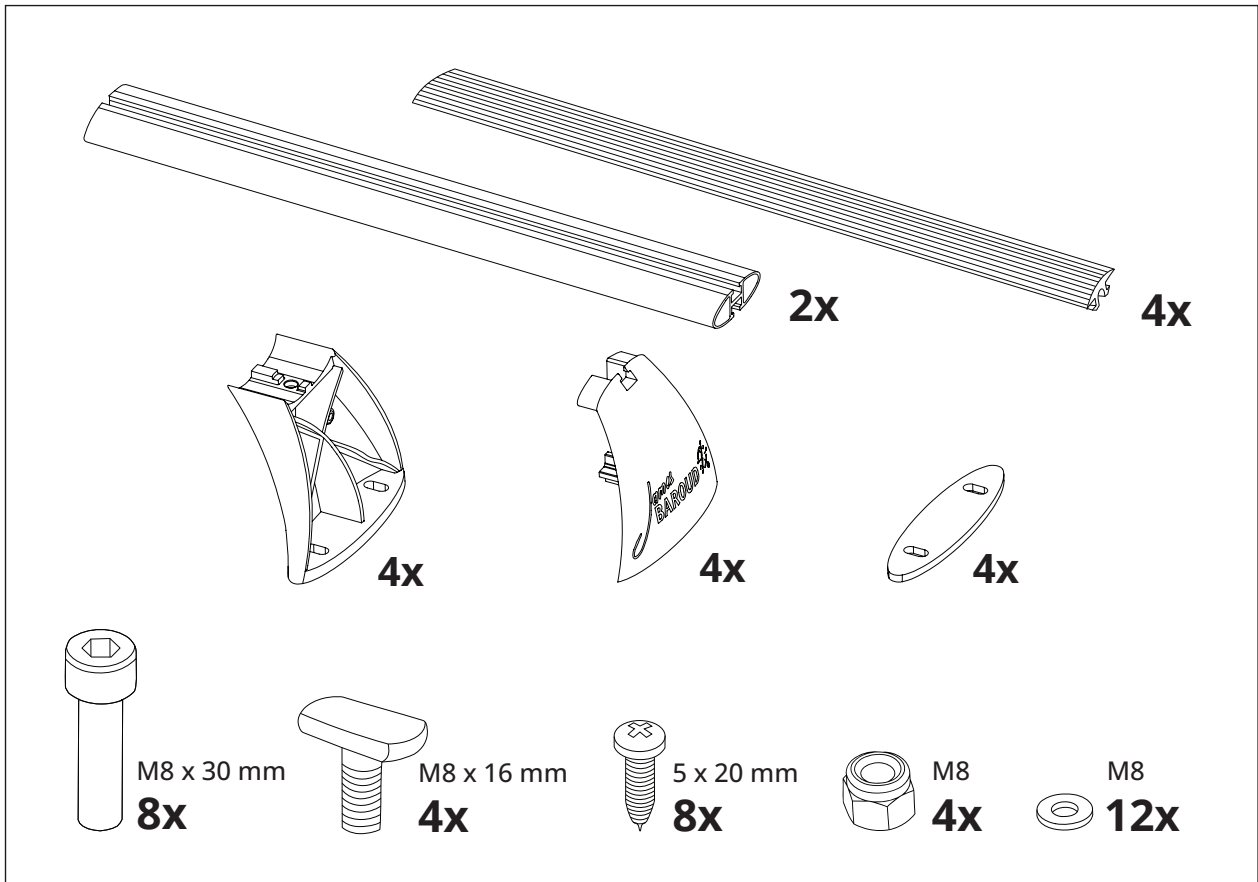


EN Maximum weight supported by cross bars

FR Poids maximum supporté par les barres

DE Maximales Belastungsgewicht der Grundträger

ES Peso máximo soportado por barras

PT Peso máximo suportado pelas barras

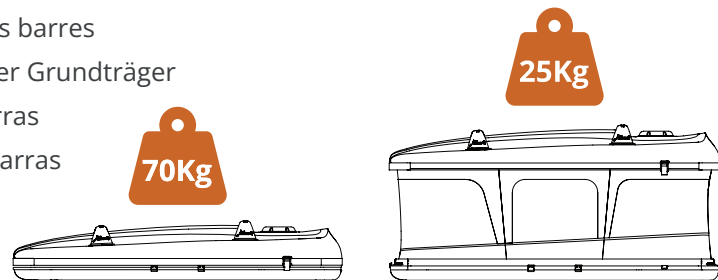

READ MORE ON

jamesbaroud.com

@jamesbaroud

