ARB BASE RACK
FITTING INSTRUCTION

Part Number: **1780620**

Product Description: **WIRING REMOVAL/RESEALING KIT**

WARNING

- Vehicle roof linings are easily damaged by creasing, as well as easily marked by dirt and grease. Caution should be used during lowering/removal steps
- If the roof rack is intended to be removed regularly, it is recommended to add an optional connector housed inside the roof (connector not provided)
- This product must be installed exactly as per these instructions using only the hardware supplied
- These instructions are correct as at the publication date
- During installation, it is the duty of the installer to check correct operation/clearances of all components
- Work safely at all times



ARB 4x4 ACCESSORIES

Corporate Head Office
www.arb.com.au

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA 3137


Tel: +61 (3) 9761 6622
Fax: +61 (3) 9761 6807

Australian enquiries sales@arb.com.au
North & South American enquiries sales@arbusa.com
Other international enquiries exports@arb.com.au

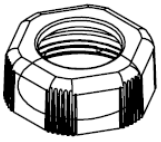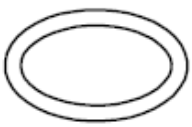
APPLICATION.	QTY	DESCRIPTION
	1	BOOT COVER MOULDING
	1	MLDNG INSERT RIGID BLANK
	1	NUT WIRING GROM
	1	ORING BS018 19.0x2.0

Copyright © 2005 by ARB Corporation Limited. All rights reserved, this document must not be reproduced without the express authority of ARB Corporation Ltd


FITTING PROCEDURE

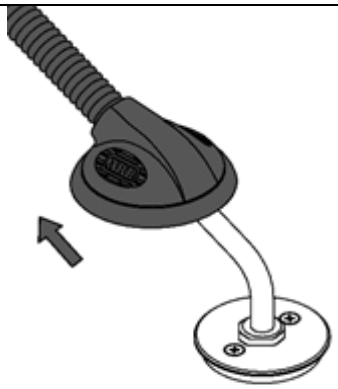


1. Disconnect the wiring from inside the vehicle
2. Remove the rubber boot and remove the nut
3. Pull the wiring out of the vehicle, it may be necessary to lower the headlining of the vehicle to draw wires through

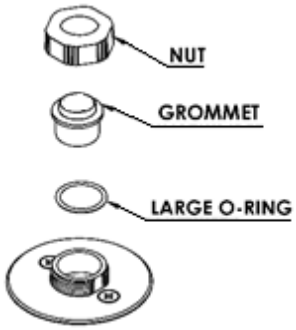

4. Assemble the O-ring, grommet then the nut onto the base

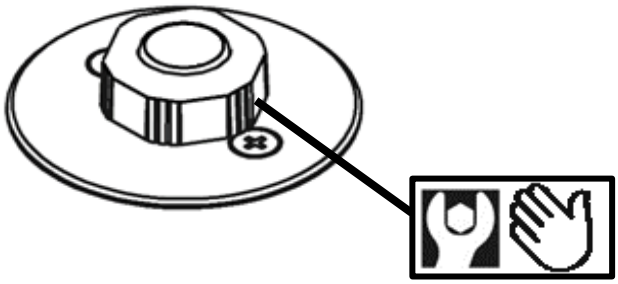

5. Tighten nut by hand
6. The nut will come to a hard stop on the thread

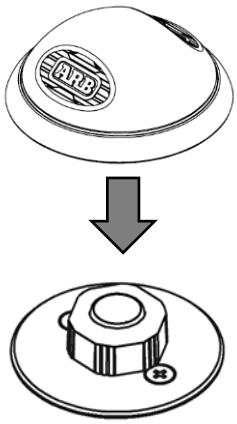

7. Fit the cover boot over the assembly

Copyright © 2005 by ARB Corporation Limited. All rights reserved, this document must not be reproduced without the express authority of ARB Corporation Ltd