



INSTALL TIME:15 Minutes

1 GET ORGANIZED

you will need:

- ☐ Land Rover Defender
- ☐ Drill machine
- ☐ 3 mm Drill bit
- ☐ Marking pen
- ☐ Star screw driver

2 INSTALL HEAD LIGHT PROTECTORS

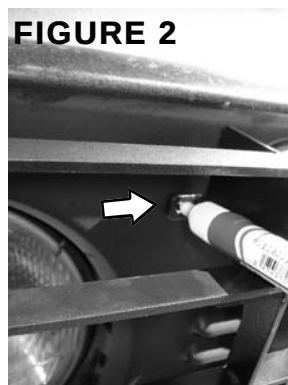
A)

Looking at the front left head light on the vehicle, you will see two self tapping screws. Using a star screw driver, remove the self tapping screws. Repeat step for the right hand side.



B)

Using the left hand Head Light Protector, place it on the headlight panel, making sure it lines up with the two original holes (Figure 1). Insert the two self tapping screws you removed in step "two A" , using a star screw driver. Using a marking pen mark the two holes, using the protector as a guide (Figure 2). Repeat step on the right hand side.

**FIGURE 1****FIGURE 2**

C)

Remove the head light guard. Using a drill machine and a 3 mm drill bit, drill the two marked positions. Refit the head light guard and secure it with four 8 x 12 self tapping screws. Repeat step on the right hand side.



Congratulations, you have completed the Head Light Protector installation.

Modifying your vehicle involves some risks and may void certain aspects of your vehicle's warranty.