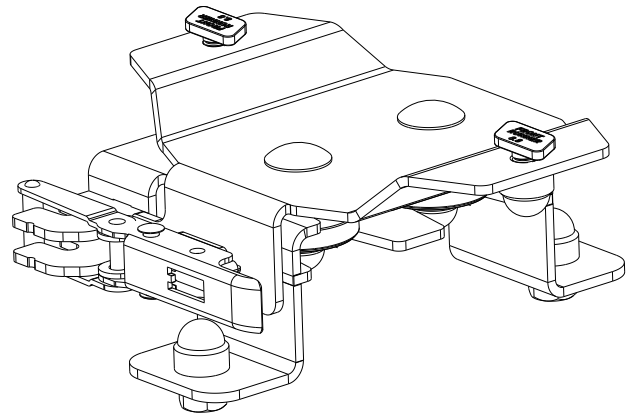
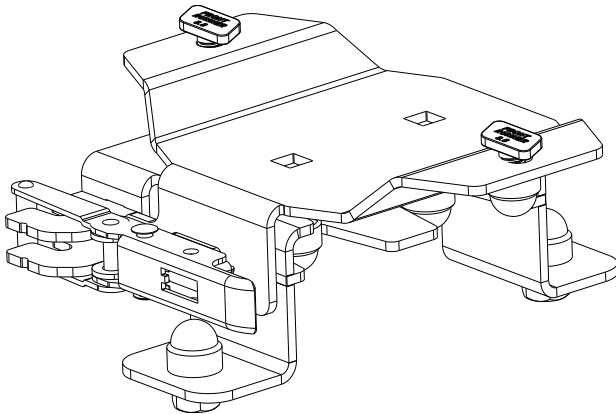


**READ ME !** ⚠

Thank you for purchasing a Waterport & Yakima Road Shower Mount.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	2 X	Latch Assembly - Top Mounting Bracket
2	2 X	Weld Assembly - Bottom Mounting Bracket
3	4 X	M8 X 30 Carriage Bolt Black
4	4 X	Bobbin - Male - SBA018
5	4 X	Bobbin - Female - SBA017
6	4 X	M8 X 16 X 1.6 Flat Washer
7	12 X	M8 Nyloc Nut
8	12 X	M8 Nut Cap
9	4 X	M8 X 20 T- Bolt
10	4 X	M8 X 16 Hex Bolt


TOOLS NEEDED



FIGURE 1.1

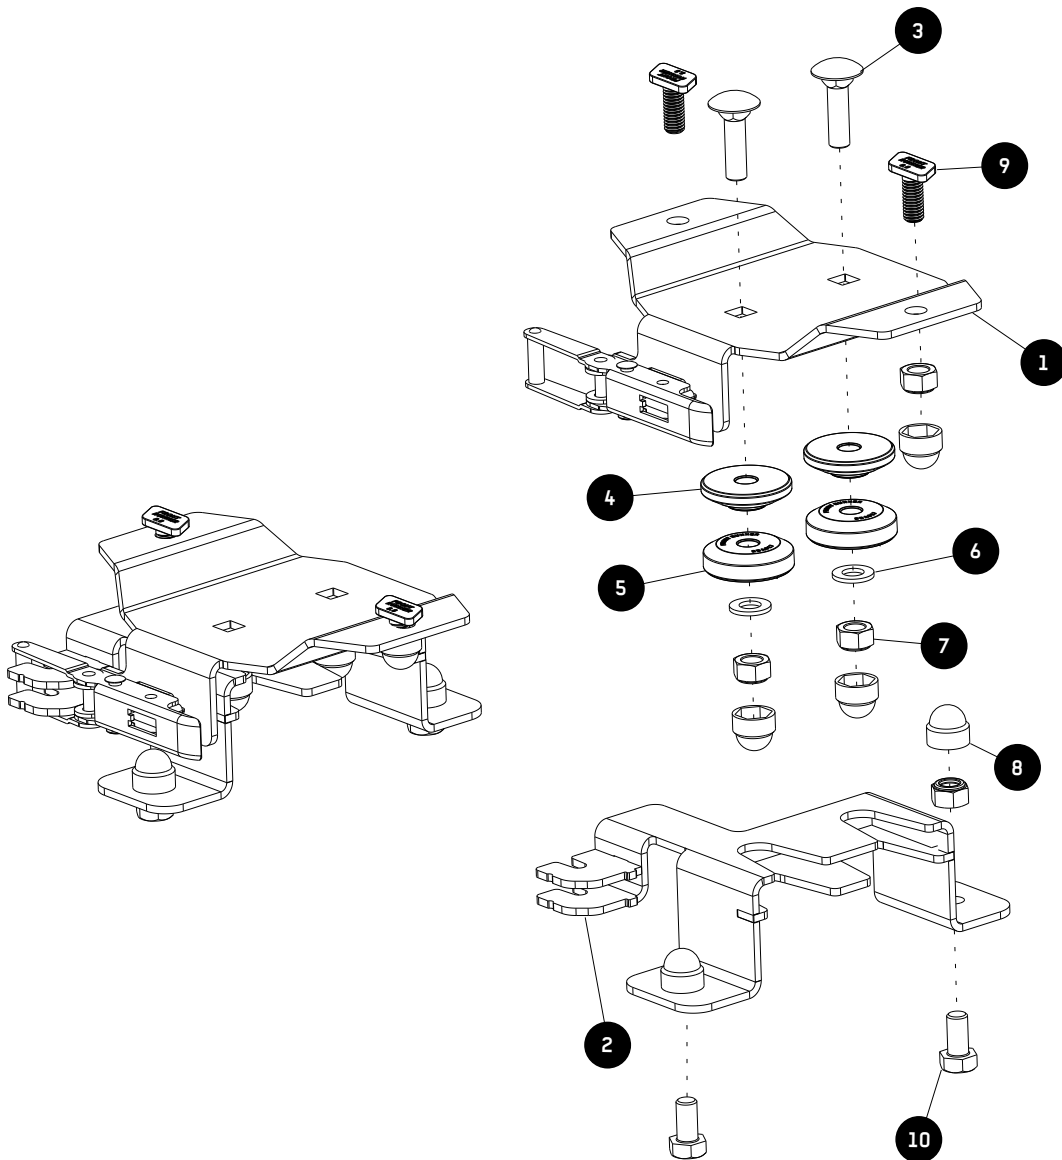

2.1

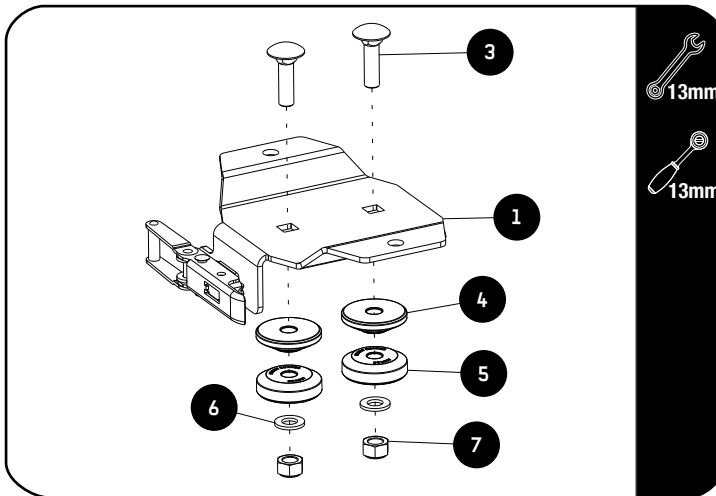

Assemble the Male and Female Bobbins (Item 4 - SBA018 & Item 5 - SBA017) to the Top Mounting Bracket (Item 1) Using M8 x 30 Carriage Bolts, M8 x 16 x 1.6 Flat washer and M8 Nyloc Nuts (Item 3 , 6 & 7).

Do not over tighten the Bobbins. Final adjustment will be done with top mounting bracket attached!

2.2



Slide the four T-Bolts (Item 9) into the T-Slot or hardware best suited for your products mounting channels.


2.3



Loosely fit the Top Mounting Bracket using M8 Nyloc Nuts (Item 7).


Do Not Fully Tighten.

2.4

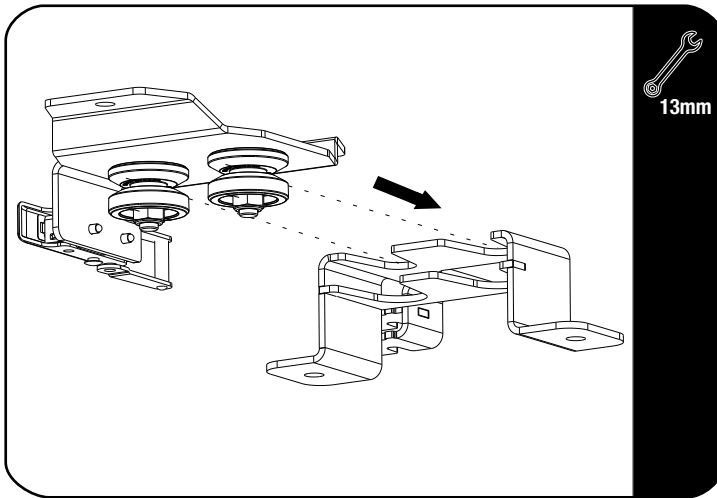

Before installing the bottom mounting brackets to the rack. Slide them onto the bobbins in the top mounting bracket to set the bobbins. Tighten the bobbins installed earlier in 2.1 enough to allow the bracket to slide in and out but not have any movement when slid onto the top bracket.

2.5

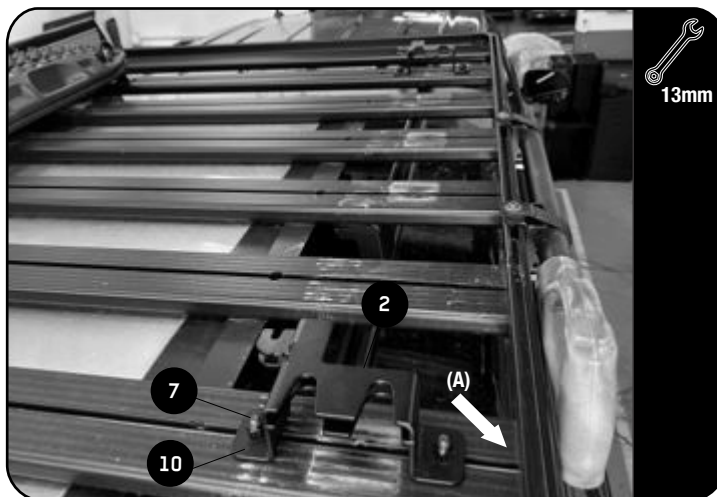


Slide the M8 x 16 Hex Bolts (Item 10) into the T-slot of the Roof rack Slats and fit the Bottom Mounting brackets (Item 2) using M8 Nyloc Nuts (Item 7). Make sure the Measurements are the same from the side Profile See (A). Fully Tighten The Bottom Mounting Brackets.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.6

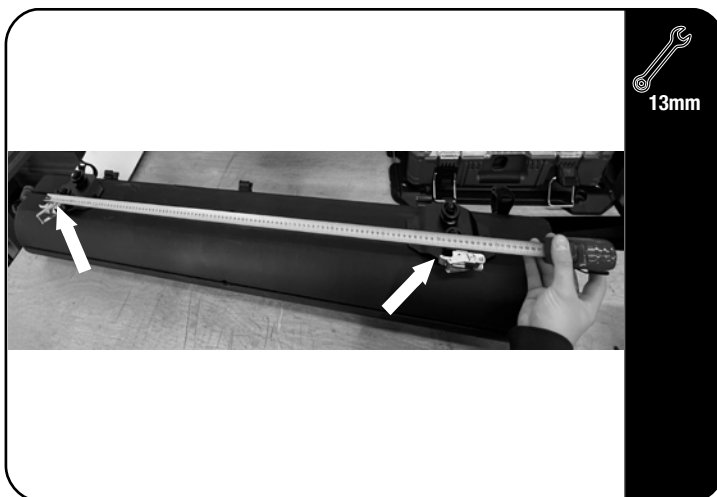


Measure the Top Mounting Brackets to match the Bottom Mounting Brackets fitted in 2.4 and Fully tighten the Top Mounting Brackets.



Tightening Torque:


M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.7

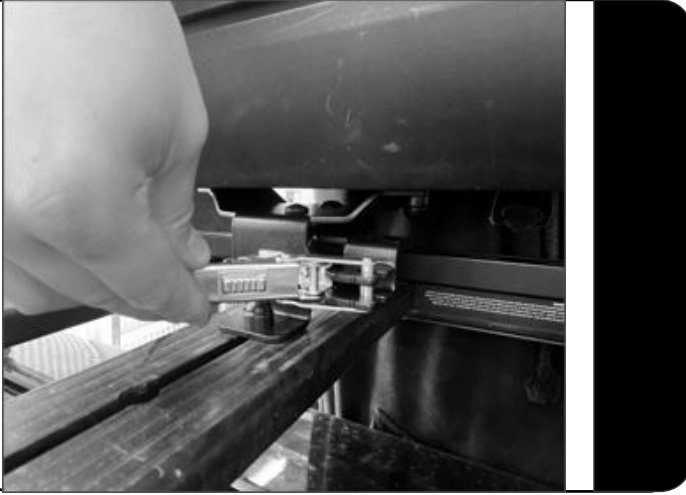

↻ Slide the Tank into the Bottom Mounting Brackets and latch the tank into place.

2.8

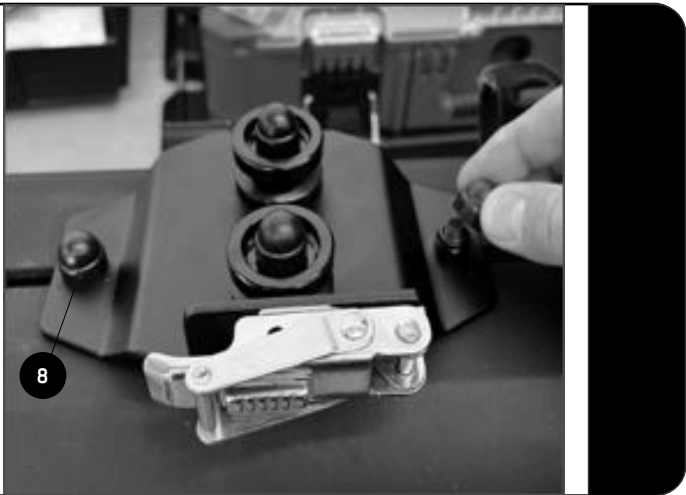

↻ Place M8 Nut Caps (Item 8) over all M8 Nyloc Nuts.



↻ Insure all the latches are fully latched

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:

