

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

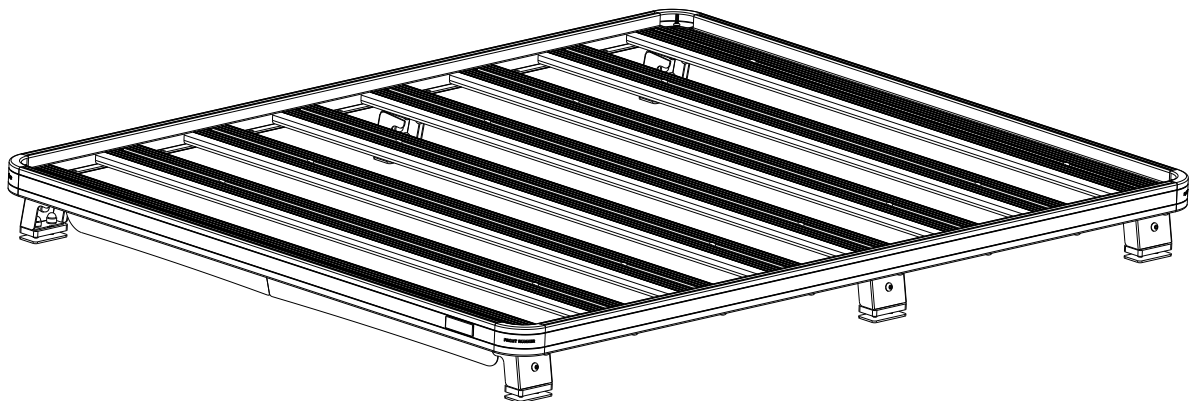

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	1 X	Slimline II Tray - 1255mm(W) X 1560mm(L)
2	3 X	Foot Set 75mm-85mm
3	3 X	Track Mount Kit

TOOLS NEEDED




13mm




5mm



FIGURE 1.1

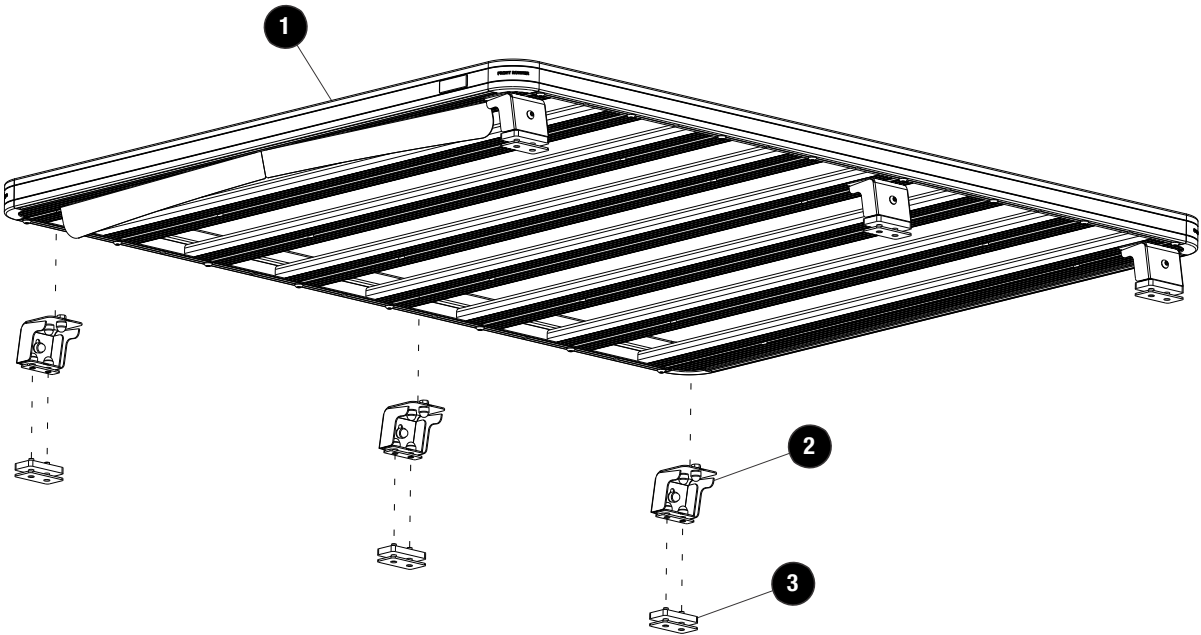


2.1

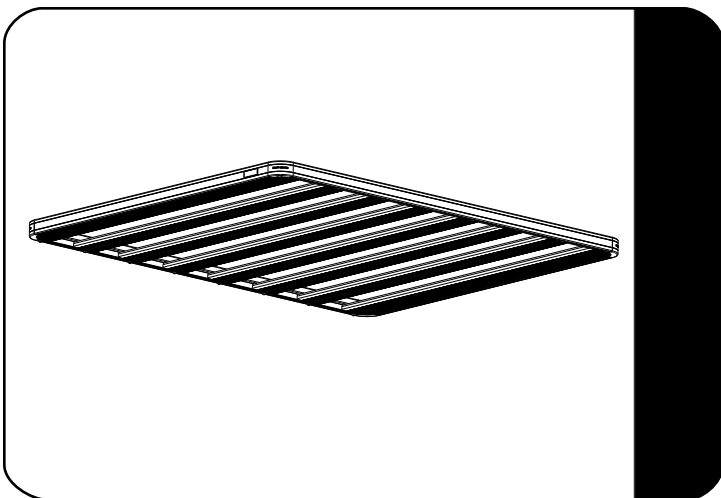

Assemble your Slimline II Tray, referring to the RRSUNI fitment guide.

2.2

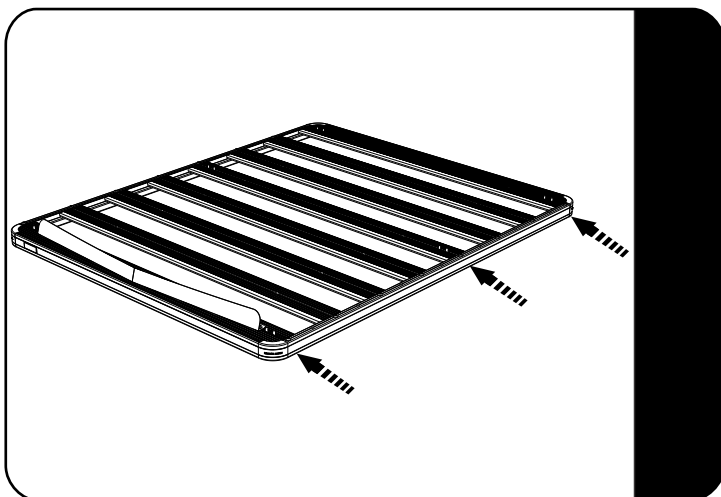


Refer to fitment guide FASSUNI.

Flip the Tray so that the bottom of the Tray faces up.

Refer to RRSUNI and fit your Wind Deflector.

Insert twelve M8x16 Hex Bolts into the Slats machined slots as shown.

2.3

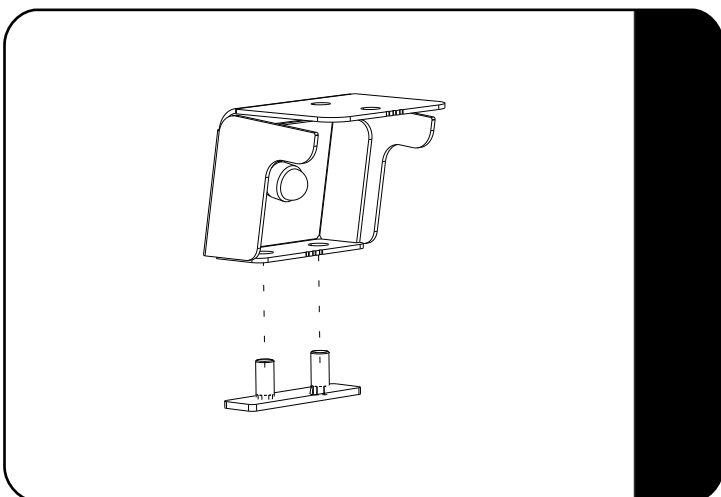


Remove the Stud Plates from all the Feet.

2


FIT AND SECURE

2.4

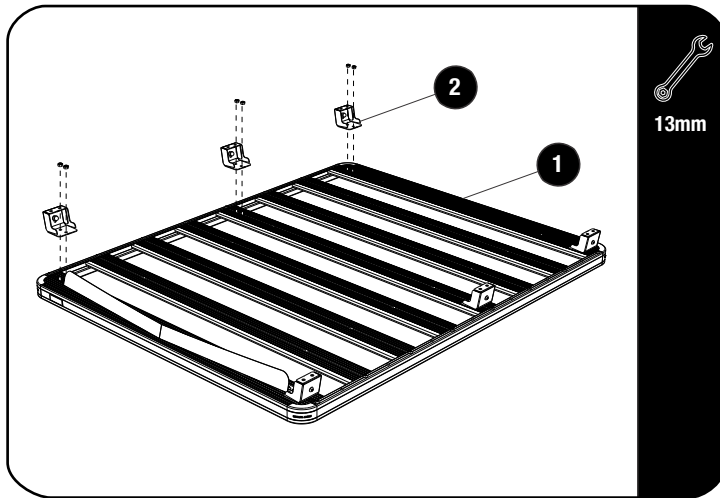

Loosley fit the Foot Sets - 75mm 85mm (Item 2) to the Slimline II tray (Item 1) with the included M8 Nyloc Nuts .

2.5

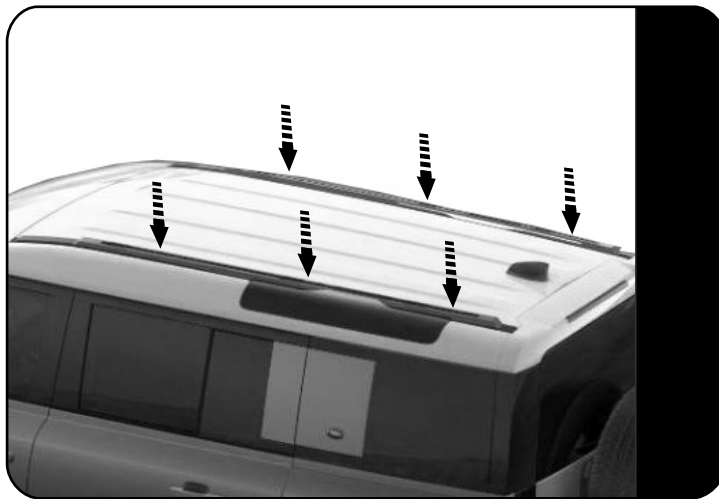


Before placing the rack onto the vehicle, insert three Stud Plates, included in RRAC930 (Item 3), into each track in the approximate position where the Feet will rest on the tracks.

Place the six spacers, included in RRAC930 over the Stud Plates.

3

FIT AND SECURE

3.1

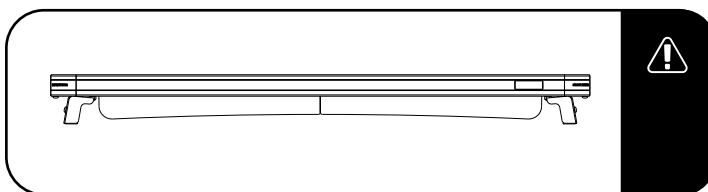


Make sure that the wind deflector is installed before you proceed to the next step.

3

FIT AND SECURE

3.2

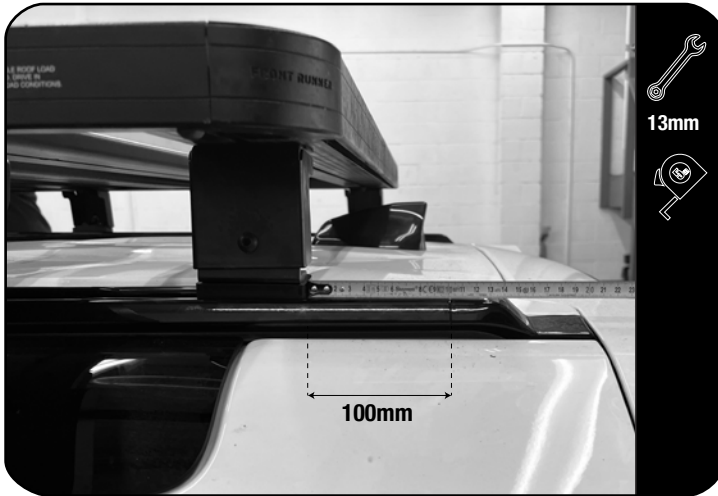

Loosely fit the roof rack to the tracks using the inserted Stud Plates and the included M8 Nyloc Nuts.

Position the rack with the two feet 100mm forward from the factory track end as shown.

3.3

Center the rack and tighten fully. Finish off by placing M8 Nut Caps over all the M8 Nyloc Nuts.



4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    