


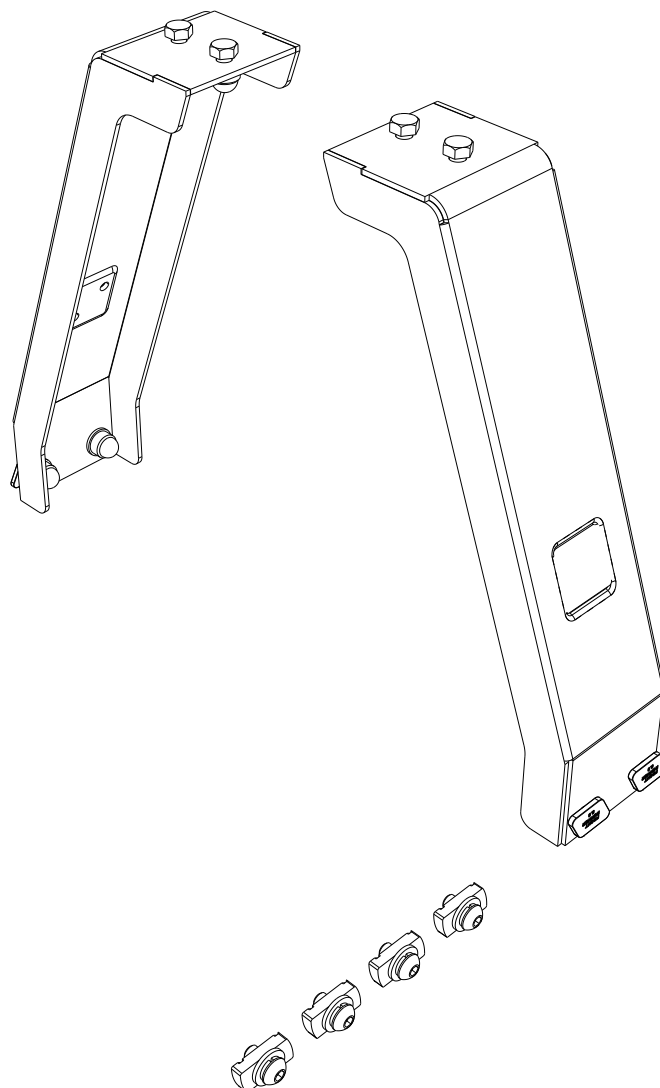

READ ME !

Thank you for purchasing a Front Runner Universal Load Bed Leg Extra Tall (Pair).

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

**1 GET ORGANIZED****IN THE BOX**

1	2 X	Leg
2	4 X	M8 x 20 Hex Head Bolt
3	8 X	M8 Nyloc Nut
4	8 X	M8 Nut Cap
5	8 X	M8 x 19 x 2 Flat Washer
6	4 X	T-Bolt M8 x 20 / 18mm Wide
7	4 X	Track Nut M8
8	4 X	M8 Spring Washer
9	4 X	M8 x 16 Button Head Bolt

TOOLS NEEDED


13mm



5mm




File

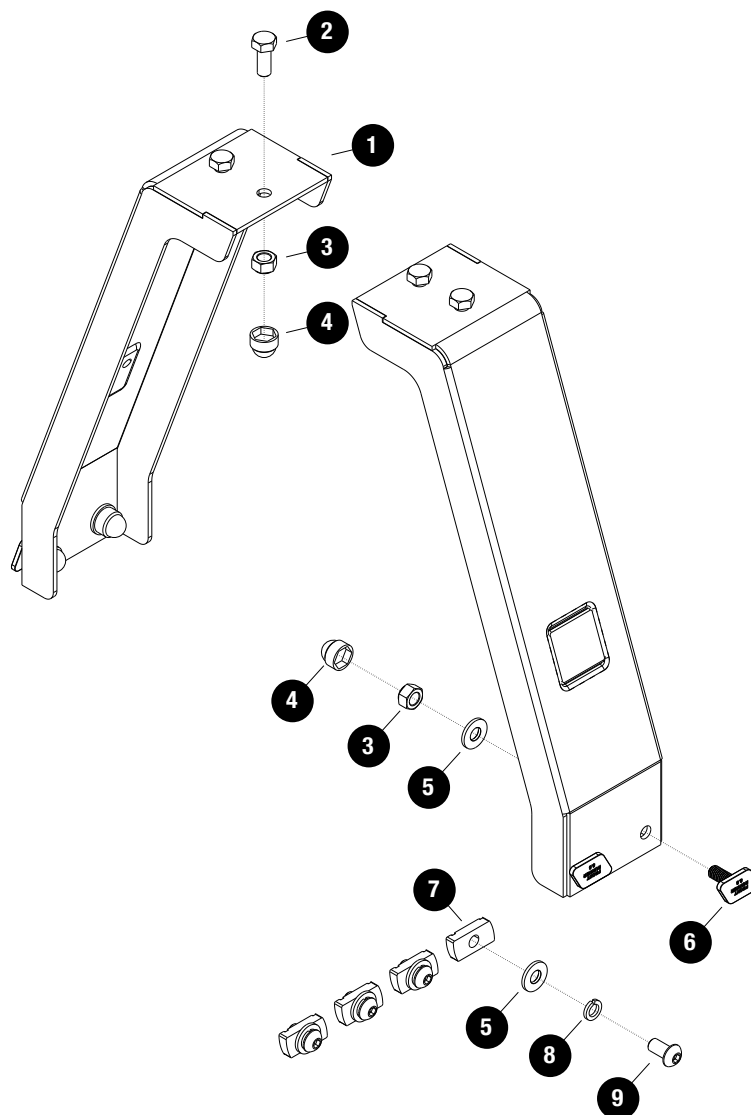FIGURE 1.1

2

FIT AND SECURE

2.1

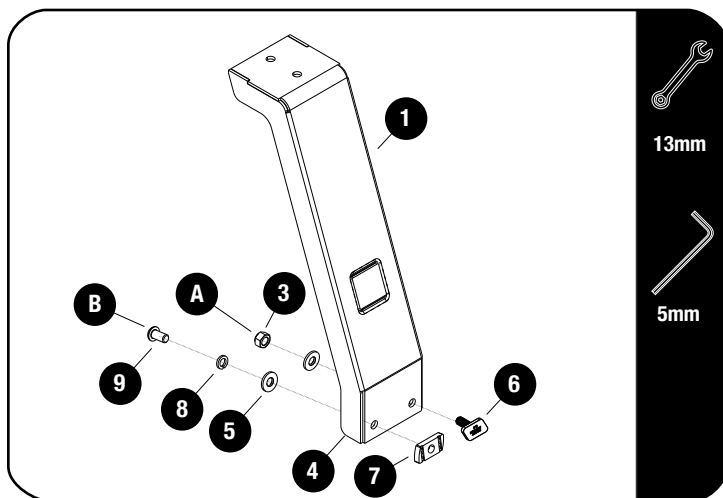**Option A:**

Used with a standard Front Runner Track.


Loosely assemble the M8 x 20 T-Bolts, M8 x 19 x 2 Flat Washers and M8 Nyloc Nuts (Items 3, 5 & 6) to the Legs (Item 1) as shown.

Option B:

Used with most load bed factory channels.

Loosely assemble the Track Nuts, M8 x 19 x 2 Flat Washers, M8 Spring Washers and M8 x 16 Button Head Bolts (Items 5, 7, 8 & 9) to the Legs (Item 1) as shown.

2.2

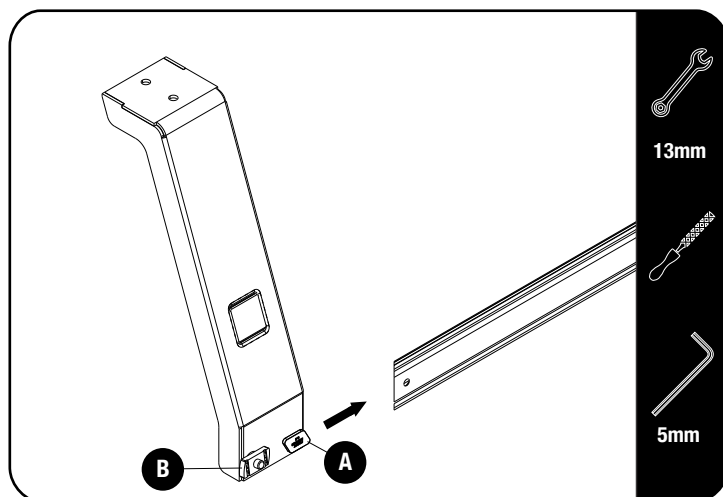

See Kit Fitment guide supplied for the positioning of the Legs (Item 1).



Slide the Required number of leg assemblies into the Track as shown.



In some cases the Channel Nut (Item 7) may need addressing with a file to remove any high spots and to ensure it slides smoothly in the track.



The M8 Track Nut (Item 7) or M8 T-Bolt (Item 6) will rotate in the track when fastening.

The remaining fasteners will be used when mounting your Load Bars or Tray to the Universal Leg.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

