


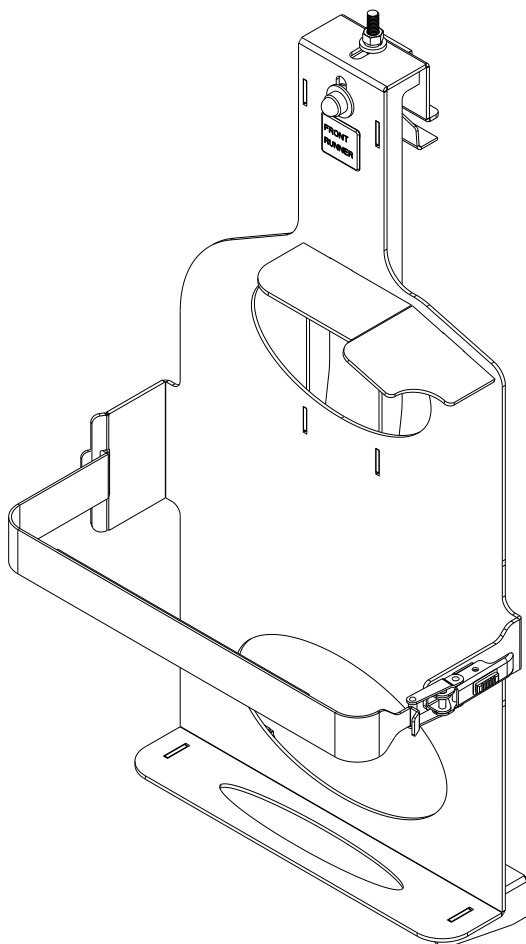

READ ME !

Thank you for purchasing a Front Runner Land Rover Defender Side Mount Jerry Can Holder.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	1 X	Jerry Can Holder
2	2 X	M6 Rivnut
3	2 X	M6 Nyloc Nut
4	4 X	M6 Flat Washer
5	2 X	M6 Spring Washer
6	2 X	M6 x 20 Hex Bolt
7	2 X	M6 Nut Cap
8	1 X	Jerry Can Strap
9	2 X	M4 Nyloc Nut
10	2 X	M4 x 9 x 0.8 SS Flat Washer
11	2 X	M4 x 10 Button Head Bolt
12	1 X	Latch With Safety Catch

TOOLS NEEDED



7mm
10mm
13mm



9mm
6.5mm




2.5mm




Rivnut Tool

FIGURE 1.1

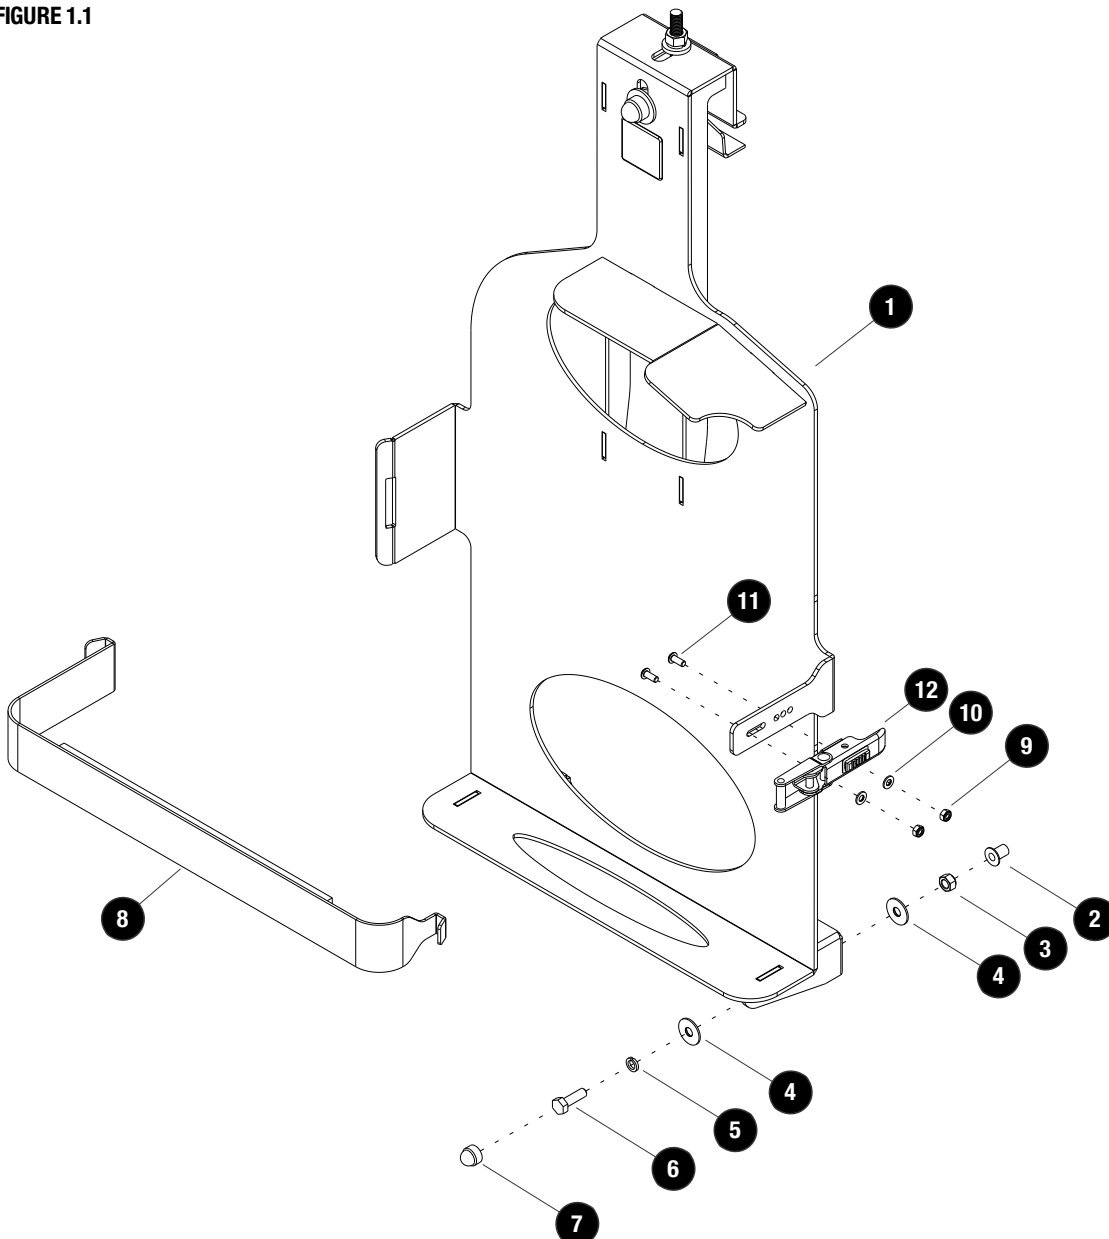


2.1

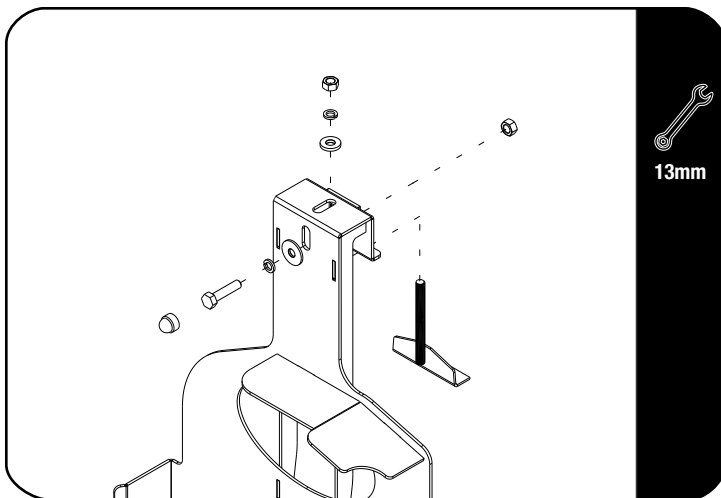


Loosen the fixings that hold the gutter clamp to the Jerry Can Holder so that it can be adjustable when placed on the vehicle.

2.2

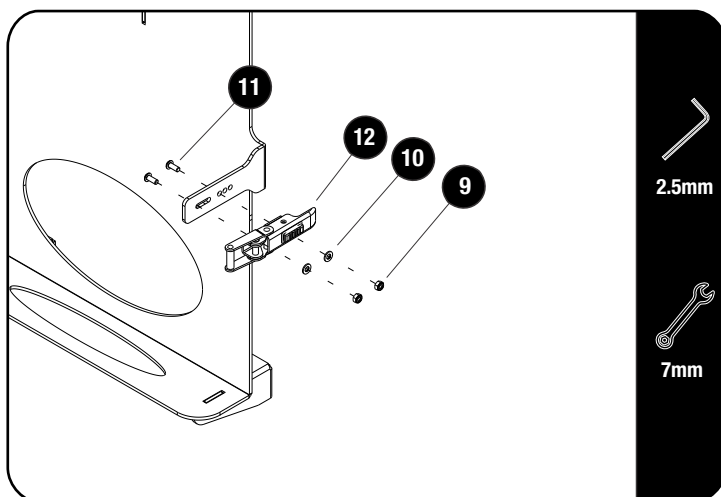

If needed adjust the Latch (Item 12) using two M4 x 10 Button head, two M4 Flat Washers and two M4 Nyloc Nuts (Items 9, 11 & 11) so that it accommodates your Jerry Can before fully tightening.

2.3

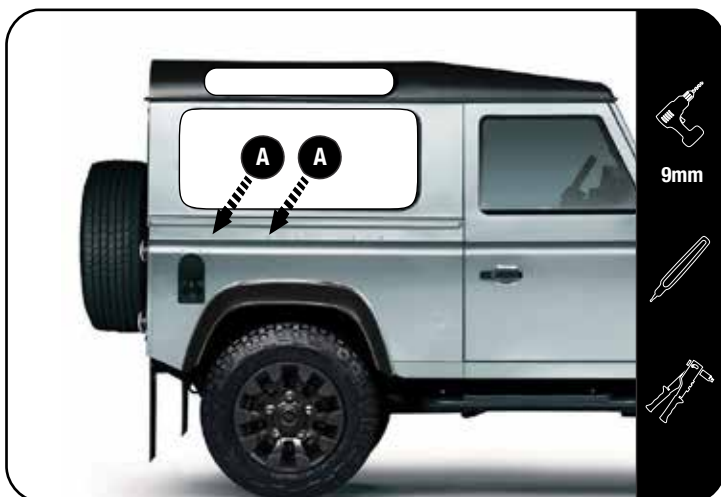

Place the Vertical Jerry Can Holder (Item 8) on the side of the vehicle so that it fits over the top gutter and lines up with the two rivets (Item A) on the vehicle body as shown in 2.3.


Mark the location of the two holes with a marker on the bottom mounting holes.

Using a 9mm drill bit, drill holes into the vehicle. Crimp the M6 Rivnuts (Item 13) into the holes drilled.

2

FIT AND SECURE

2.4

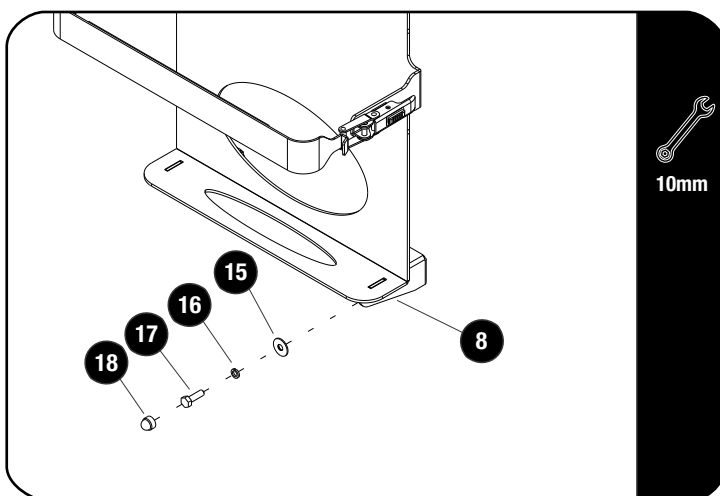

Mount the Vertical Jerry Can Holder (Item 8) to the vehicle using two M6 x 20 Hex Bolts, two M6 Spring Washers and two M6 Flat Washers (Items 15, 16 & 17).

2.5



Fully tighten the gutter clamp bracket that was loosened in 2.1

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

