

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

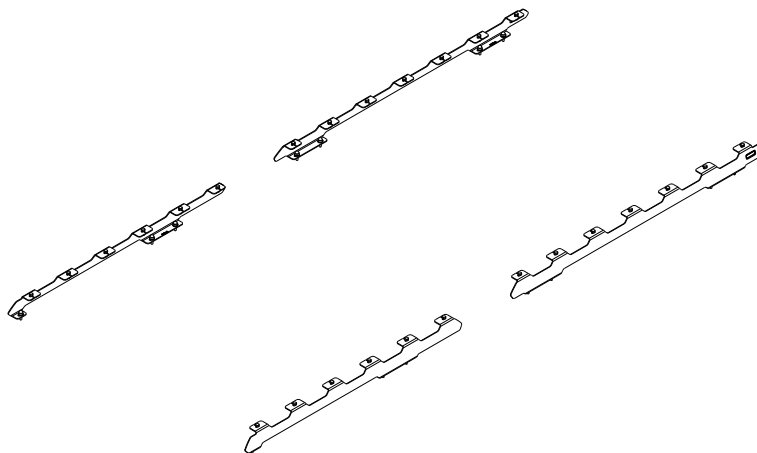

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	2 X	Rear Foot Rail LH & RH
2	2 X	Front Foot Rail LH & RH
3	26 X	M8 x 20 Hex Bolt
4	26 X	M8 x 16 x 1.6 Flat Washer
5	26 X	M8 Nyloc Nut
6	26 X	M8 Nut Cap
7	14 X	M6 x 20 x 2 Flat Washer
8	14 X	M6 x 35 Hex Bolt
9	14 X	M6 Nut Cap
10	14 X	Spacer

TOOLS NEEDED




10mm
13mm
21mm




Silicone
Sealant

FIGURE 1.1

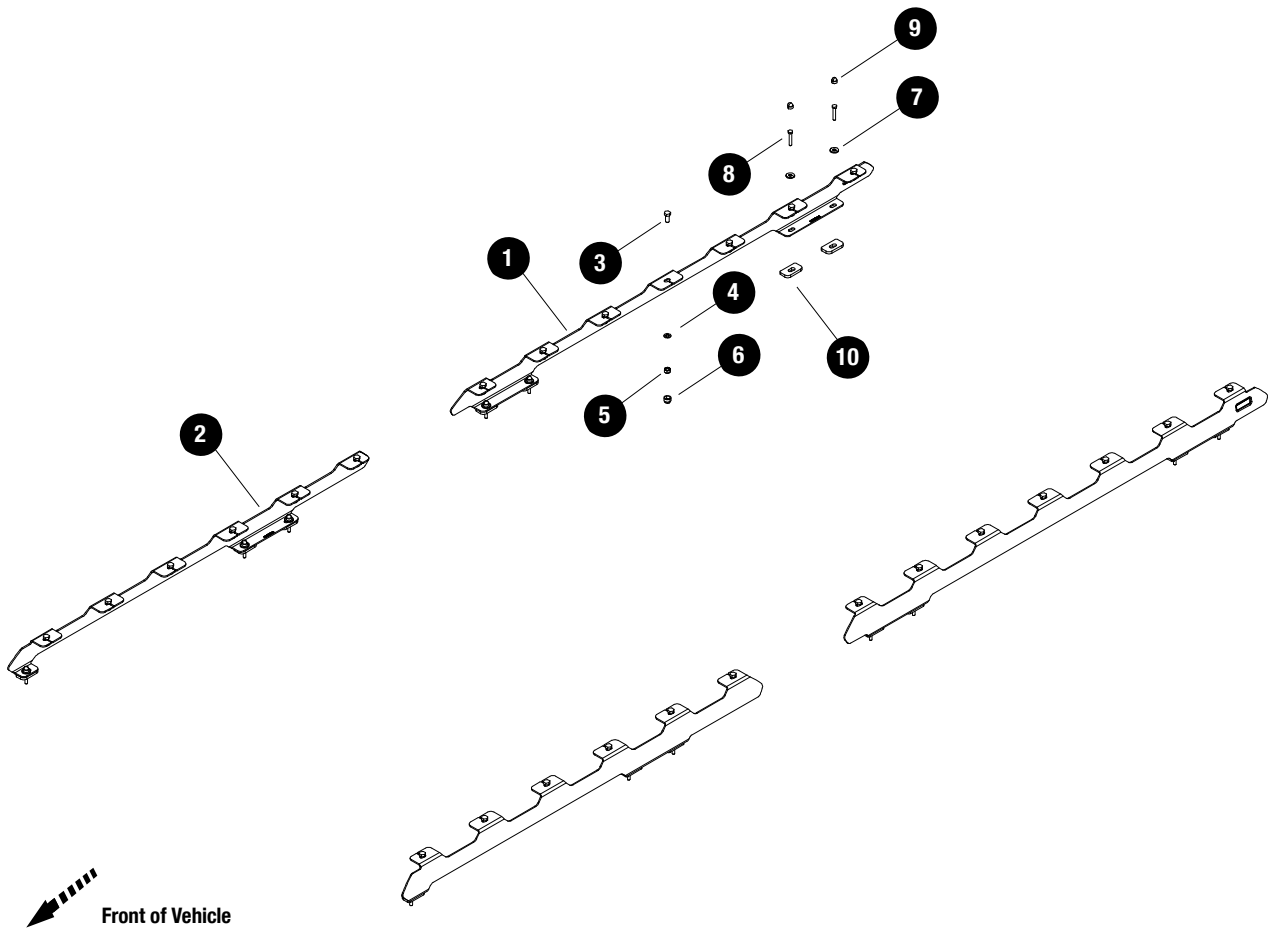


2.1

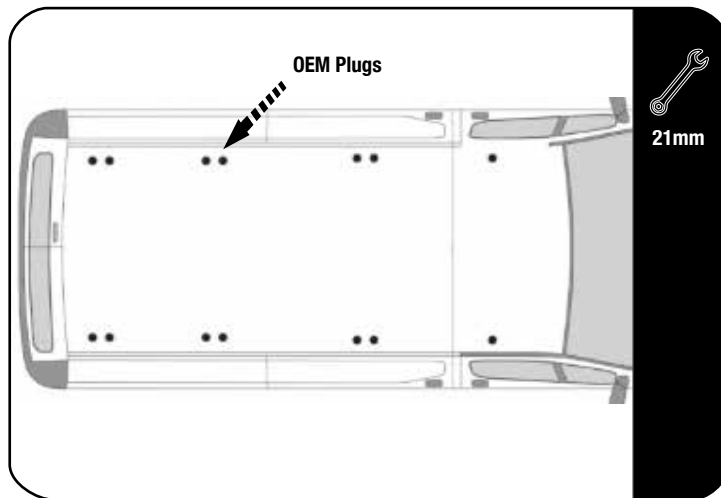


⌚ To prepare for this fitment, you need to remove the OEM plugs from the roof. There are 7 plugs per side.

2.2

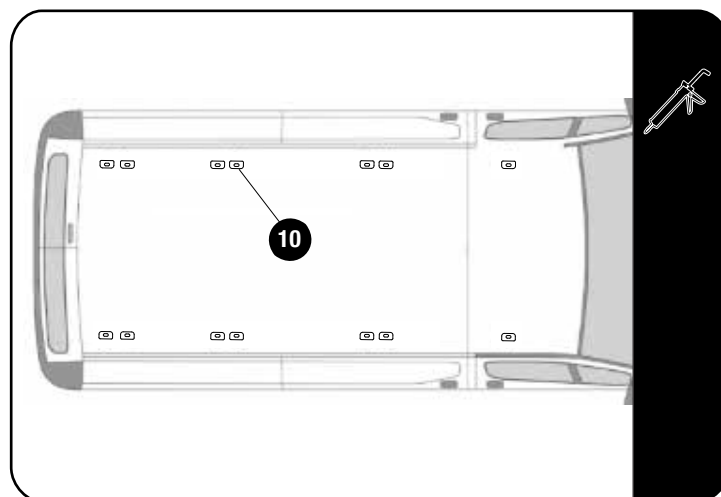

⌚ Apply a bead of silicon in and around each of the mounting holes before placing the Spacers (Item 10) over each of the mounting points.

2.3

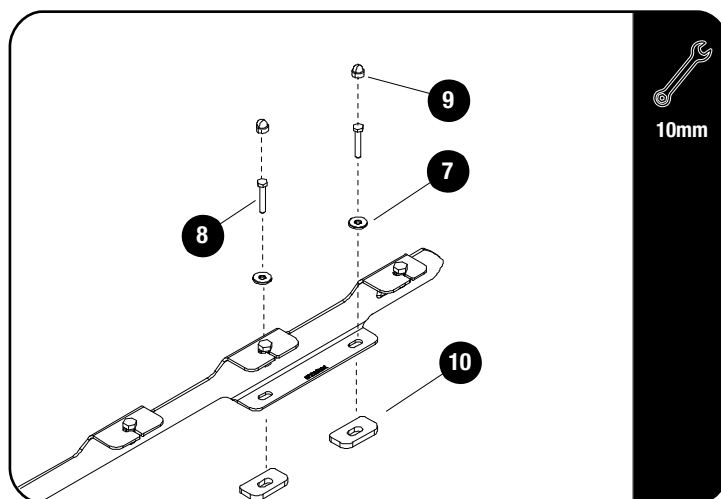

⌚ Secure the Foot Rails to the vehicle using M6 x 35 Hex bolts & M6 x 20 x 2 Flat Washers (Items 7 & 8).

Fully tighten all fasteners before placing M6 Nut Caps (Item 9) onto the bolt heads.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

3


FIT AND SECURE

3.1

Refer to RRSUNI when assembling your Slimline II Tray.



3.2

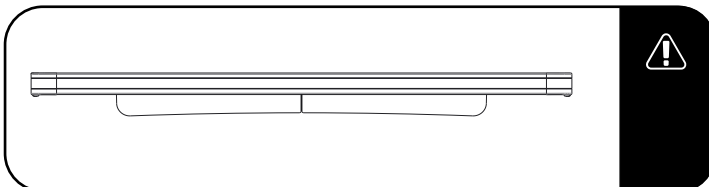


Make sure that the wind deflector is installed before you proceed to the next step.



For this fitment you will use the Low Profile wind deflector (WDST009).

3.3

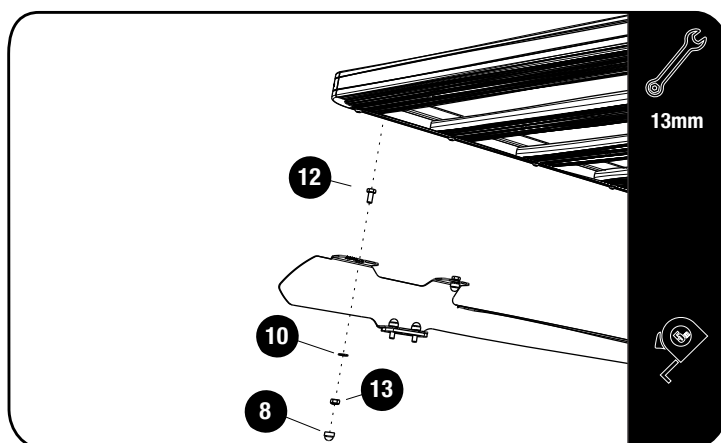

Fit your roof rack to the Foot Rails using M8 x 20 Hex Bolts, M8 x 16 x 1.6SS Flat Washers and M8 Nyloc Nuts (Items 3, 4 & 5) as shown.



Center the rack and fully tighten. Place M8 Nut Caps (Item 6) over all Nyloc Nuts.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

4

COMPLETION

4.1

Congratulations! You did it. Take a step back and admire your work!



5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on: