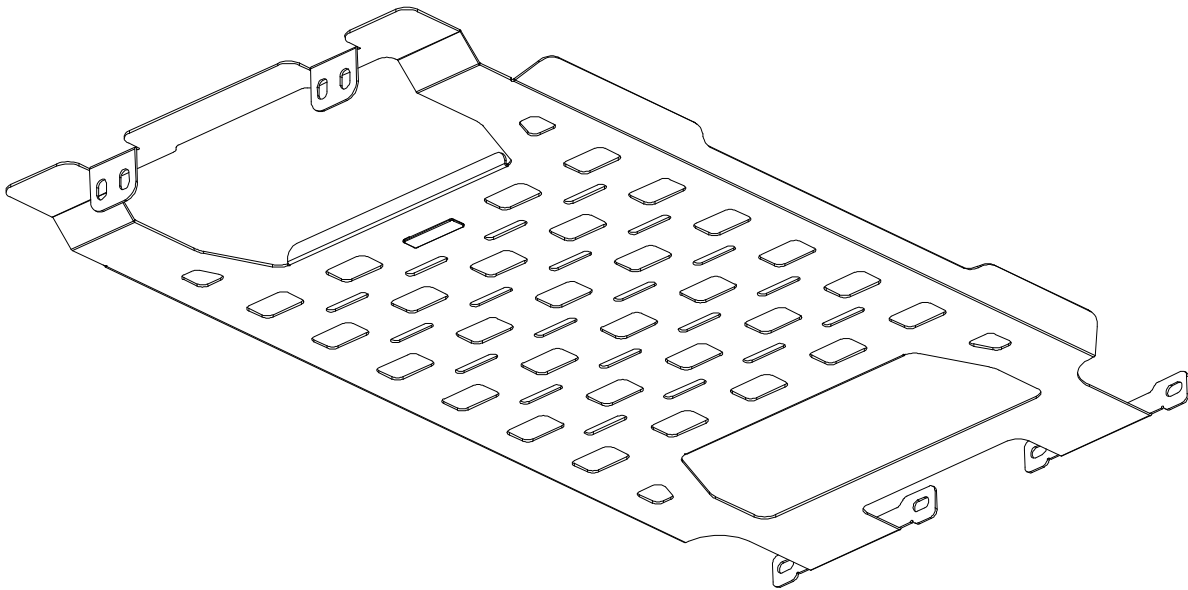


**READ ME ! ⚠**

Thank you for purchasing a Jeep JL Freedom Panel Molle Panels.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX


1	1 X	Freedom Panel Mole
---	-----	--------------------

TOOLS NEEDED



Torx
T25
T40

FIGURE 1.1

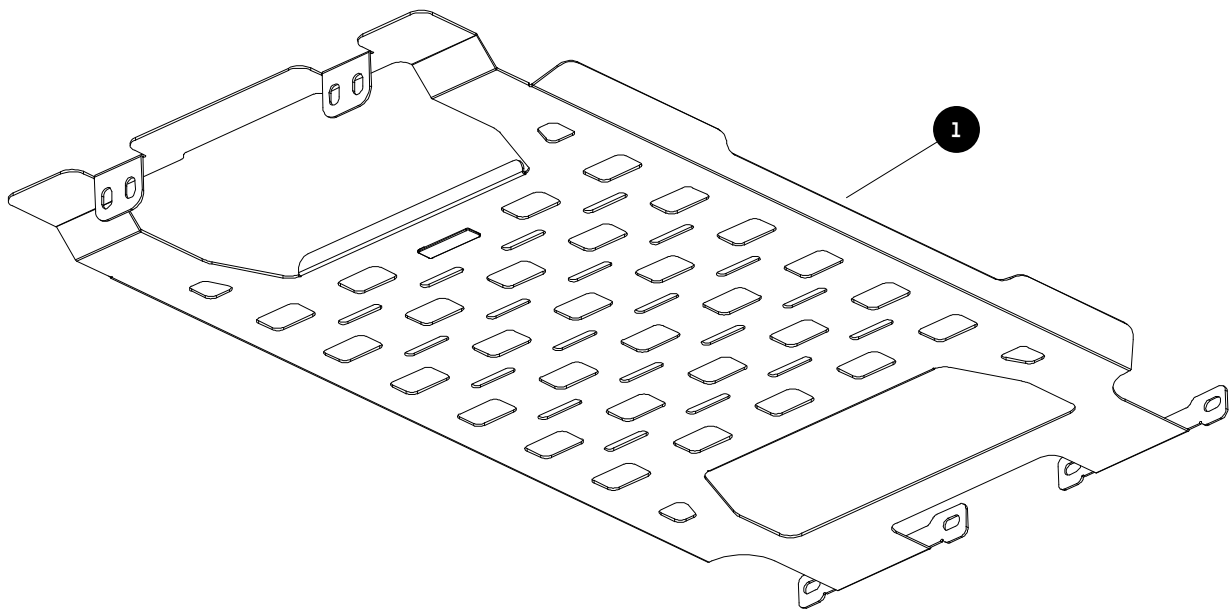

2.1



Start by removing both freedom panels from the vehicle.

2.2



★
Torx
T25
T40



Loosen the three self tapping screws holding the middle speaker trim.

Unclip the trim to get access to the rear freedom panel catches. Remove both left and right hand catches.

Also unclip the front trim to get access to the front freedom panel catches and remove both catches. (See 2.3)

Position the Molle Panel (Item 1) by aligning the rear mounting tabs with the OEM mountings of the freedom panel catches and loosely refit the catches together with the Molle Panel using the OEM fasteners removed earlier.

2.3



Align the front mounting tabs on the Molle Panel with the OEM mountings of the front catches and loosely refit the front catches together with the Molle Panel using the OEM fasteners removed earlier.

Now fully tighten both front and rear fasteners.

Clip the speaker trim back into place before refitting the three self tapping screws removed in 2.2.

Also clip the front trim back into place.



**Tightening Torque 8-10Nm /
5.9 ft lb - 7.38 ft lb.**

2

FIT AND SECURE

2.4



Refit the freedom panels removed in 2.1.



With your new Molle Panel in place, you may need to loosen the freedom panels front latch bolts a 1/2 turn to secure the panel in place.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:

