




FRONT RUNNER
VEHICLE OUTFITTERS

RECOVERY DEVICE & GEAR HOLDING SIDE BRACKETS

ENG

RRAC103

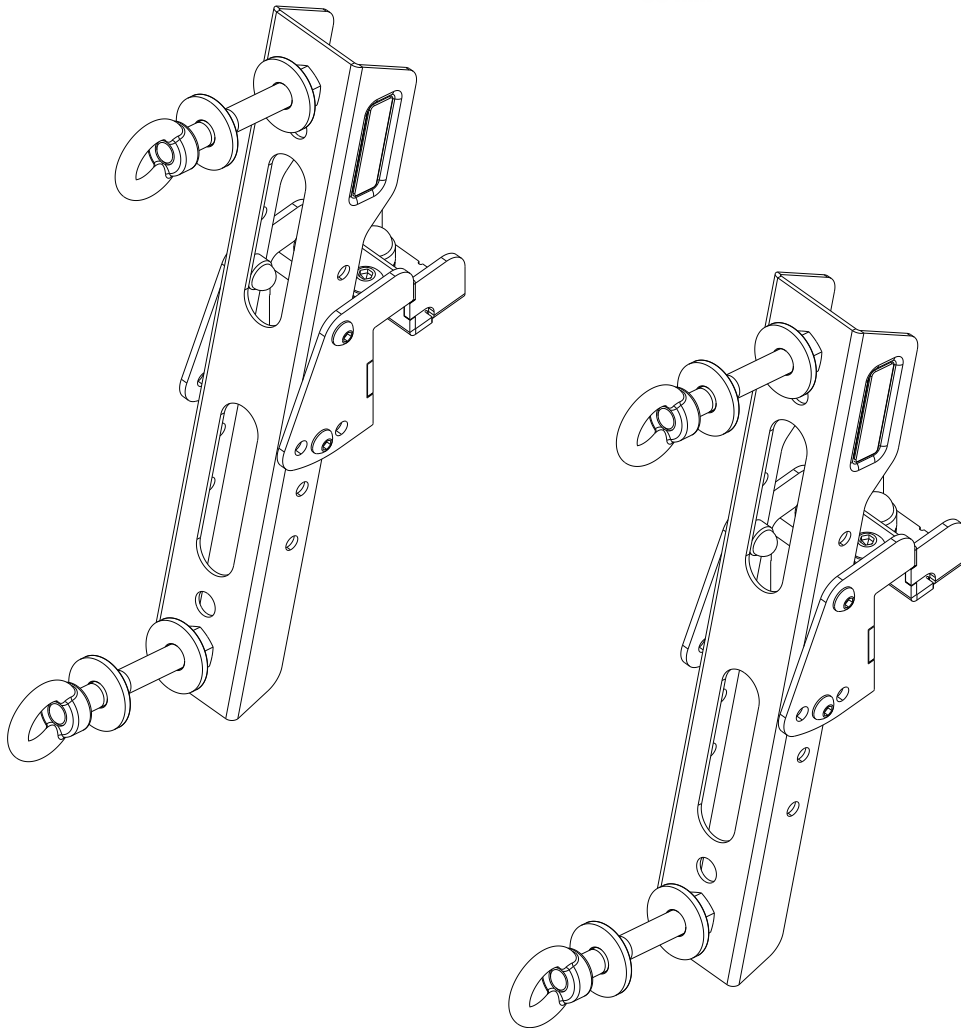

READ ME !

Thank you for purchasing a Front Runner MAXTRAX Bracket.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

Here is what you are looking at for RRAC103

IN THE BOX

1	1 X	General Assembly
2	2 X	Support Bracket
3	2 X	M8 x 20 Hex Bolt
4	2 X	M8 x 16 x 1.6 Flat Washer
5	6 X	M8 Nyloc Nut
6	2 X	M8 Nut Cap
7	4 X	M10 x 80 Hex Bolt
8	4 X	M10 x 60 Hex Bolt
9	4 X	M10 x 45 Hex Bolt
10	4 X	M10 Nyloc Nut
11	8 X	M10 x 30 x 3 Flat Washer
12	4 X	M10 Black Eye Nut
13	4 X	M8 x 20 Button Head Bolt
14	8 X	M6 Black Nylon Washer

TOOLS NEEDED







FIGURE 1.1

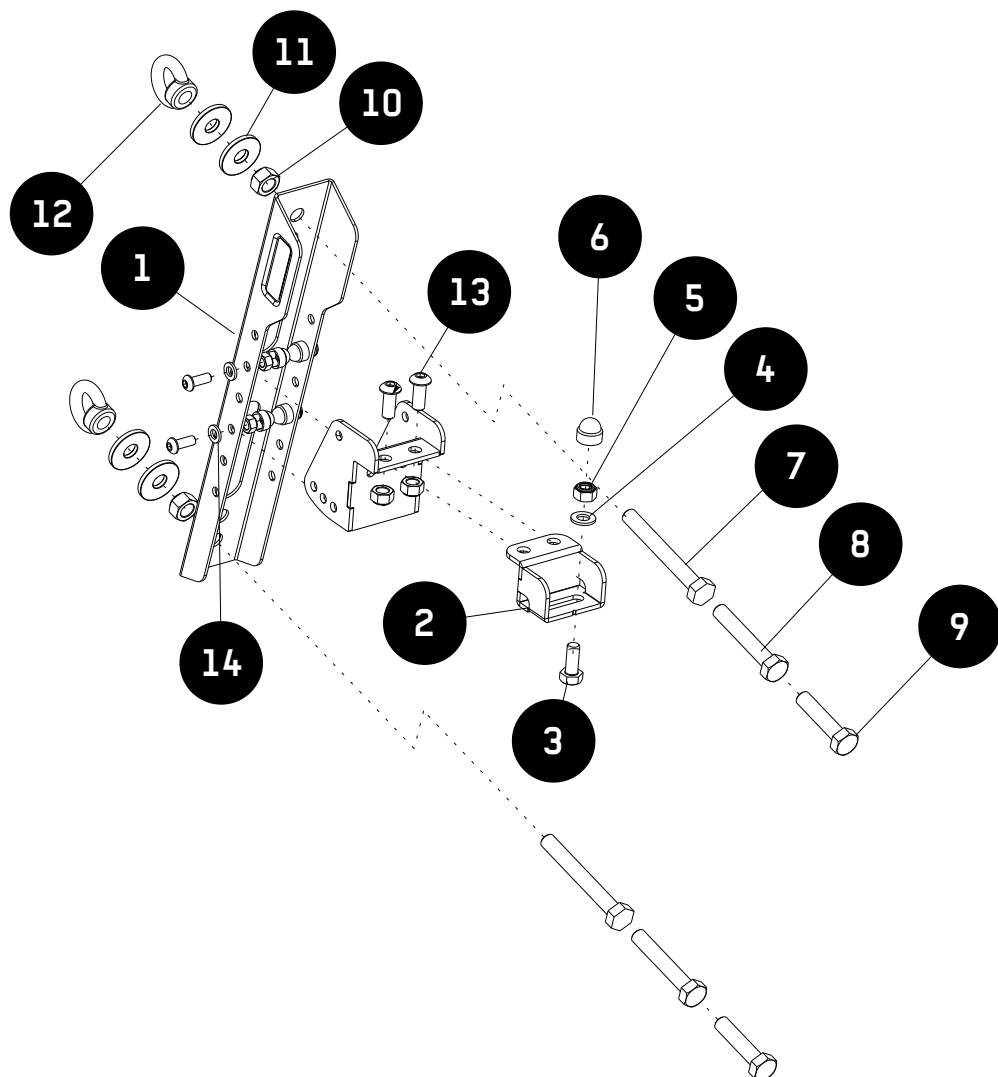

2

FIT AND SECURE

2.1

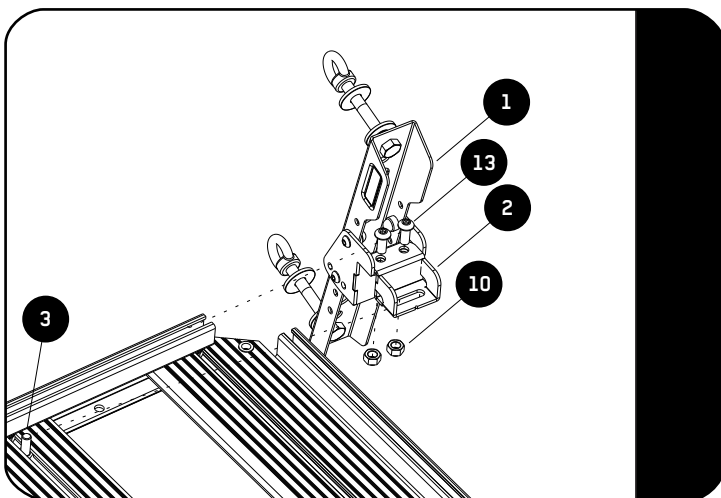


Start by removing the corner of the tray. Very loosely assemble the Mounting Bracket and the Support Bracket (Items 1 & 2) using two M8 x 20 Button Head Bolts and two M8 Nyloc Nuts (Items 13 & 10) - roughly one turn.

Slide this assembly into the side profile where the corner has been removed.

Slide a M8 x 20 Hex Bolt (Item 3) into the chosen slat and slightly lift the Support Bracket to fit over this bolt.


2.2

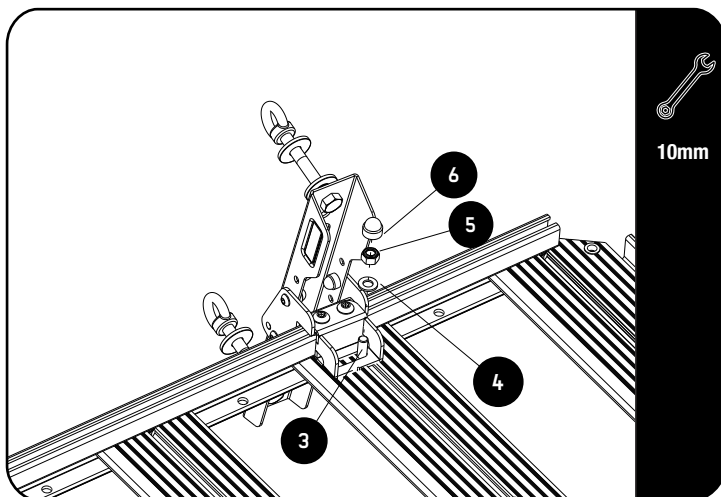

Secure the assembly from Step 2.1 to the slat using a M8 x 16 x 1.6 Flat Washer and a M8 Nyloc Nut (Items 4 & 5).


Fully tighten all fastens and place a M8 Nut Cap (Item 6) on the M8 Nyloc Nut.

2.3

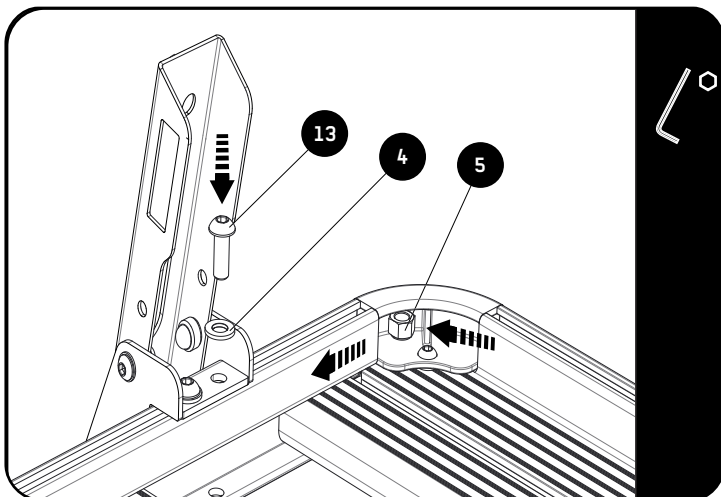

Fit and secure the second MAXTRAX Mounting Bracket as shown.


2.4

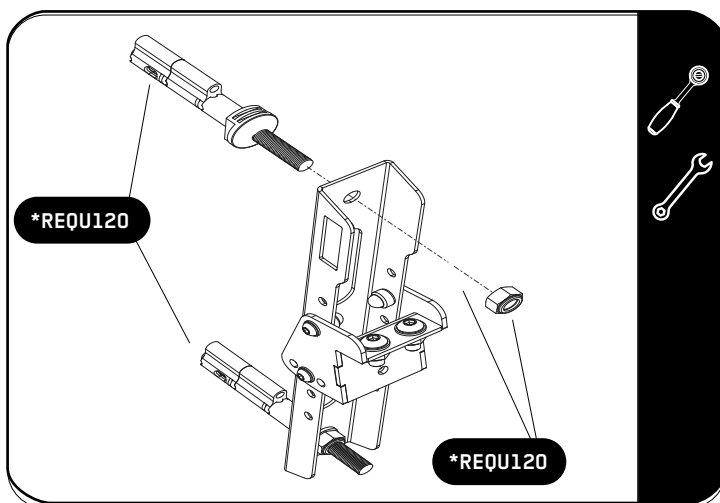

MAXTRAX Mounting Pin Set (REQU120)
Compatible with Front Runner MAXTRAX
Brackets.


***REQU120 Sold Separately.**

2.5

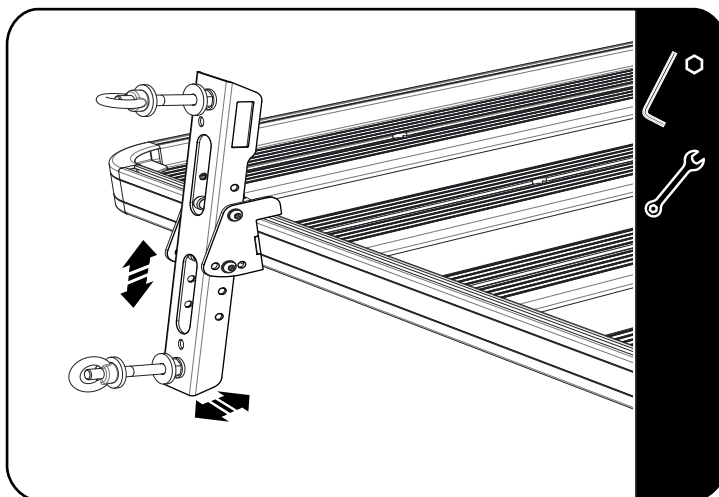

**Check the clearance with vehicle body
and doors using a MAXTRAX resting on
the bracket bolts.**

2.6

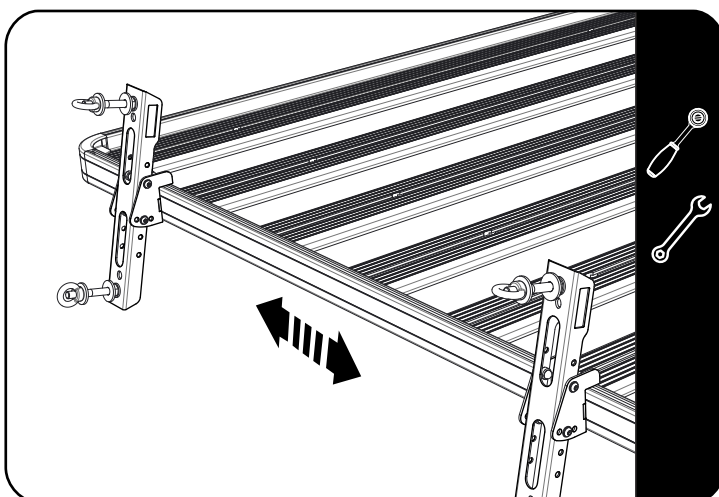

**Set final position with a MAXTRAX
mounted onto the brackets and fully
tighten brackets.**

**Refit the corner of the tray, removed in
Step 2.1.**

3

COMPLETION

3.1

Congratulations! You did it. Take a step back and admire your work!



4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

