


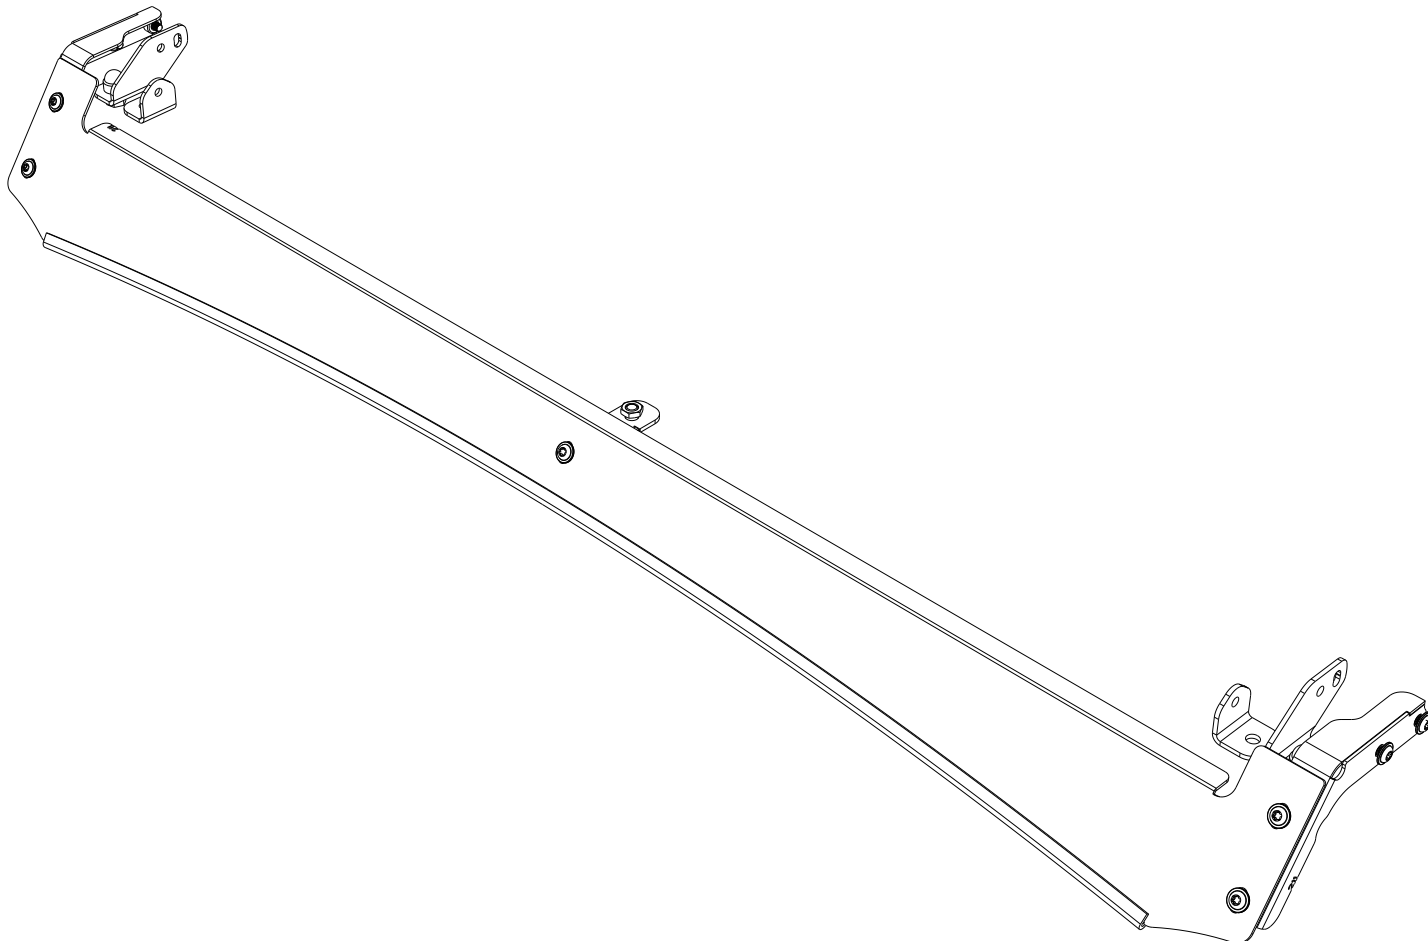

READ ME! ⚠

Thank you for purchasing a Front Runner Subaru XV Crosstrek (2017-Current) Slimsport Rack 40" Light Bar Wind Fairing.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	1 X	Light Bar Wind Fairing
2	2 X	Wind Fairing Side Support 1LH & 1RH
3	1 X	Wind Fairing Mid Support
4	2 X	Light Bar Bracket 01 1LH & 1RH
5	2 X	Light Bar Bracket 02
6	9 X	M6 x 16 Flange Button Head
7	1 X	M8 Thin Hex Nut
8	1 X	M8 Schnorr Washer
9	1 X	M8 x 12 Button Head
10	2 X	M8 x 16 Hex Bolt
11	2 X	M8 Nyloc Nut
12	2 X	M8 Nut Cap
13	1 X	Wind Fairing Rubber (1100mm)
14	1 X	Clear Vinyl Strip

TOOLS NEEDED



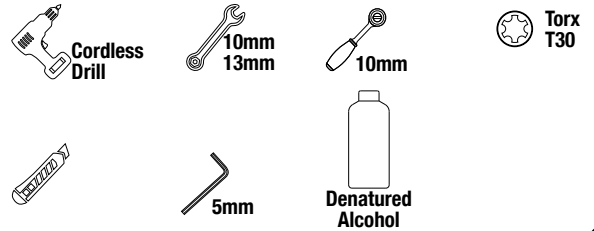


FIGURE 1.1

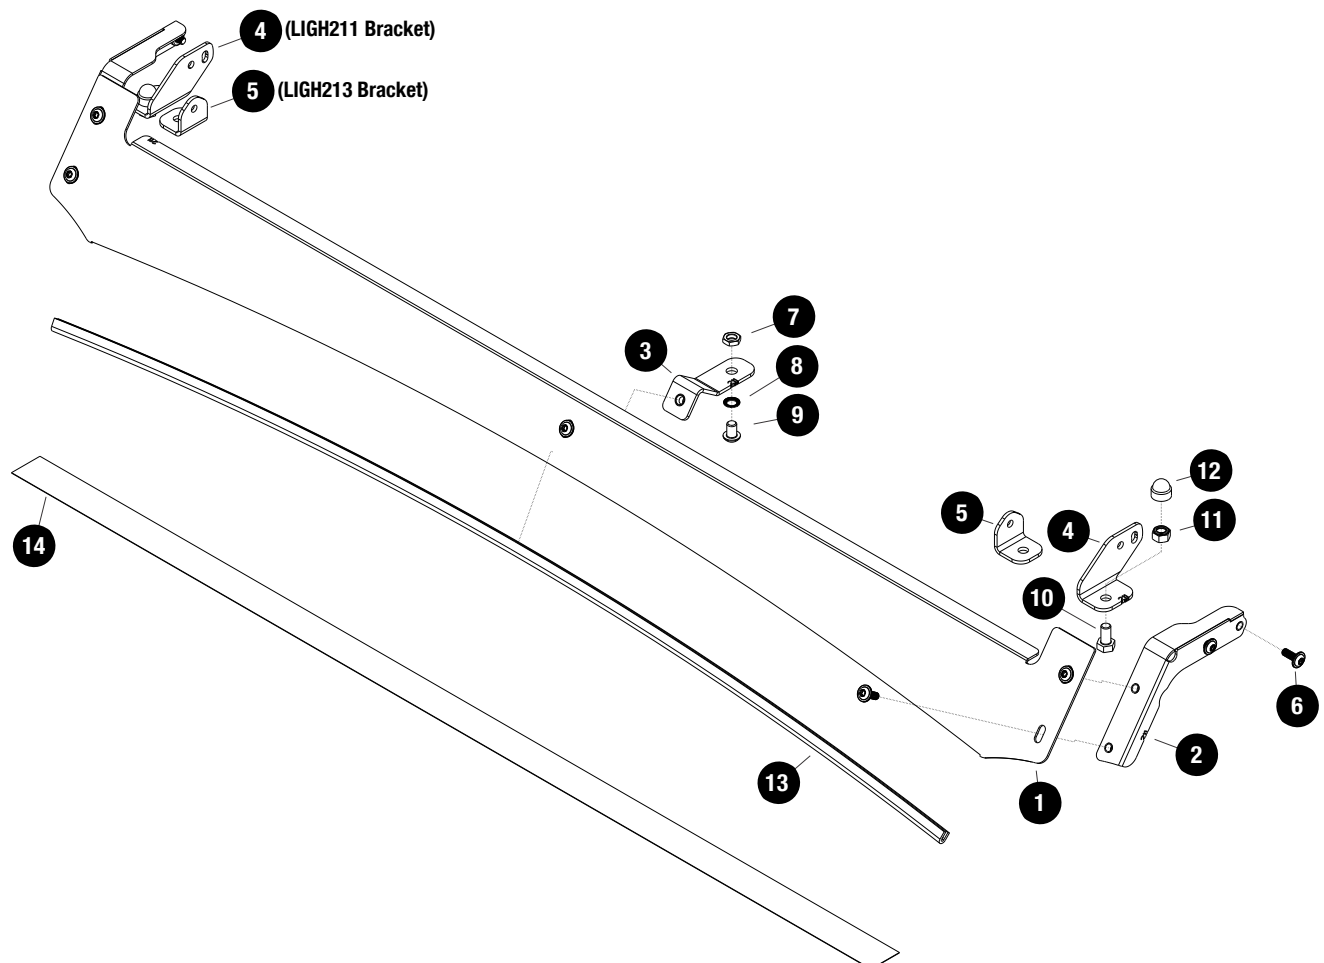

2.1

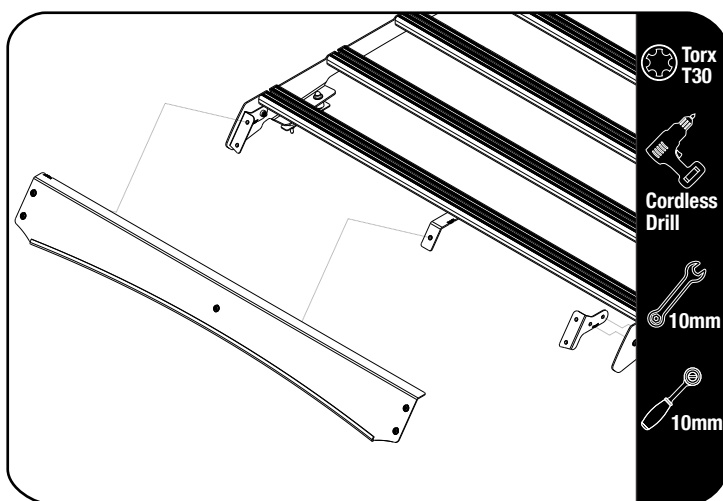


Remove the Slimsport Wind Fairing and side support brackets.
Loosen and remove the front slat.



Keep screws in a safe place to use later.


2.2

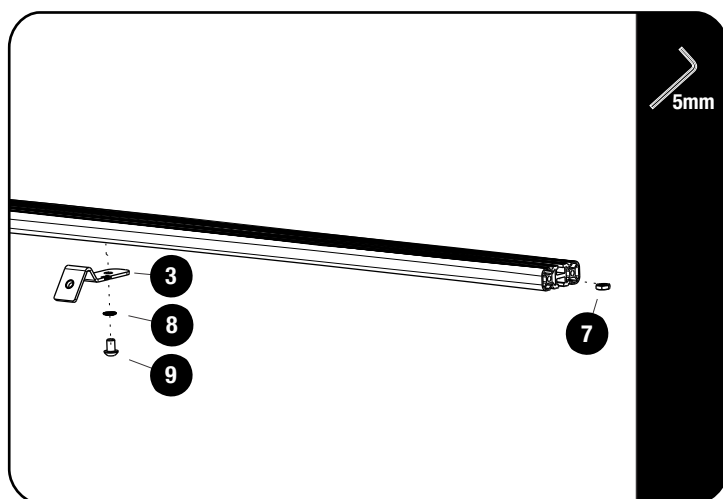

Remove the Wind Fairing Mid Support Bracket that is currently on the slat and replace it with the Fairing Mid Support Bracket supplied with this kit (Item 3).

Slide one M8 Thin Nut (Item 7) into the T-slot of the front slat. Center the Mid Support Bracket in the middle of the slat and secure using a Schnorr Washer and M8 x 12 Button Head (Items 8 & 9). Fully tighten.

2.3

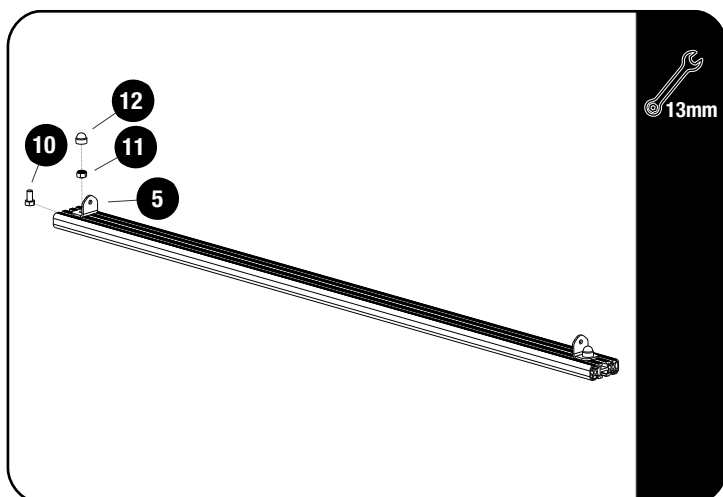


See Fig 1.1 for which brackets are suitable for your Light Bar

Fit the chosen Light Bar Brackets LH / RH (Item 4 or 5) using M8 x 16 Hex Bolts & M8 Nyloc Nuts (Items 10 & 11). Fit the Light Bar and center on slat before fully tightening the brackets.

Place M8 Nut Caps (Item 10) over all Hex Bolts.

2.4

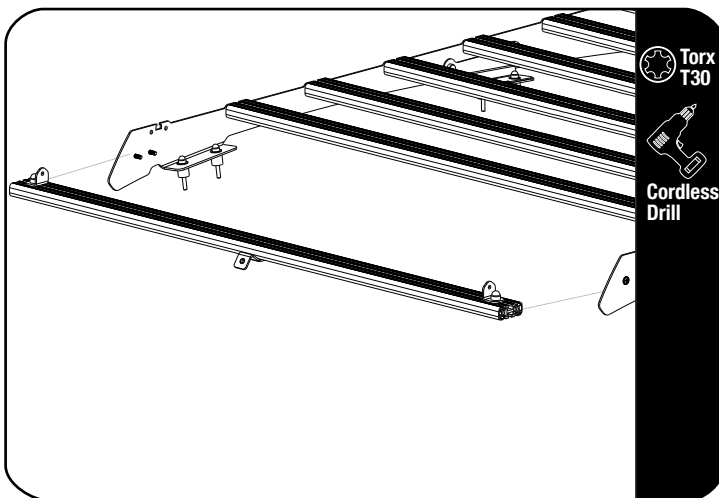


Secure the assembly from step 2.3 to the front two bottom holes on the Foot Rails using the fasteners removed in Step 2.1. Fully tighten.




Tightening Torque 9 - 11 Nm / 6.6 - 8.1 ft lb

2.5

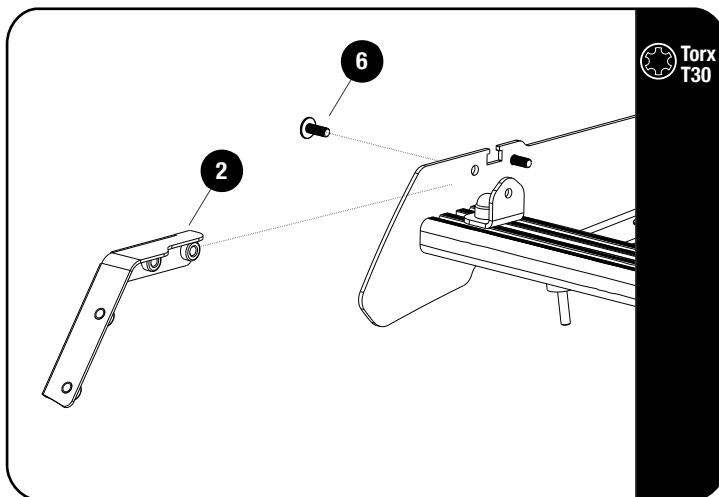

Secure the Wind Fairing Side Supports LH / RH (Item 2) to the Foot Rail's top holes as shown using M6 x 16 Flange Button Head (Item 6).

2.6

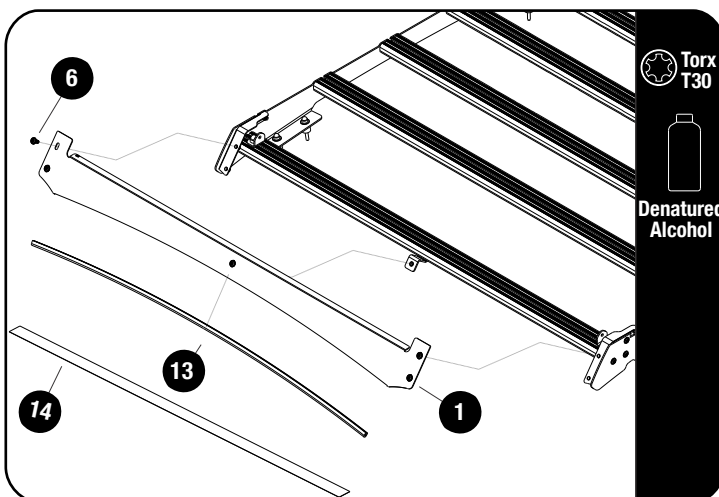

Fit the Wind Fairing Rubber (Item 13) to the Wind Fairing (Item 1). Using the notched section as a guide, trim if needed.

Use the Clear Protection Strip (Item 14) included to protect the roof paint work, where the Rubber Trim will be making contact with the roof.

Apply Denatured Alcohol to make sure the roof is clean before applying.

Cut the Clear Protection strip to fit the roof of the Vehicle.

Secure the Light Bar Wind Fairing assembly to the rack assembly, using M8 x 16 Flange Button Heads (Item 6) and fully tighten.



Wind Fairing needs to be adjusted to down the roof before fully tightening.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

