

START HERE!

READ ME FIRST





Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.

Before you begin, take a moment and open all your Front Runner Rack Kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. Front Runner Mounting System specific to your vehicle
2. Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the Mounting System and assist you in fitting the Rack tray or Load Bars to your specific vehicle. Please refer to the next page for a list of all the components, quantities and tools required.



IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.


Please call us if you have any questions about the installation of this product.

**1 GET ORGANIZED****IN THE BOX****PBJG001**

1	2 X	FRONT LH / REAR RH MOUNTING BRACKET
2	2 X	FRONT RH / REAR LH MOUNTING BRACKET
3	4 X	M8 X 19 X 3 FLAT WASHER
4	4 X	M8 X 25 BUTTON HEAD SCREW
5	12 X	M8 X 20 BUTTON HEAD SCREW
6	24 X	M8 X 16 X 1.6 FLAT WASHER
7	24 X	M8 NYLOC NUT
8	24 X	M8 NUT CAP
9	8 X	M8 X 30 CARRIAGE BOLT
10	4 X	M8 NUT PLATE

TOOLS NEEDED

NOTE: The Pro Bed Rack requires the Jeep Trail Rails to be installed for fitment of Mounting Brackets

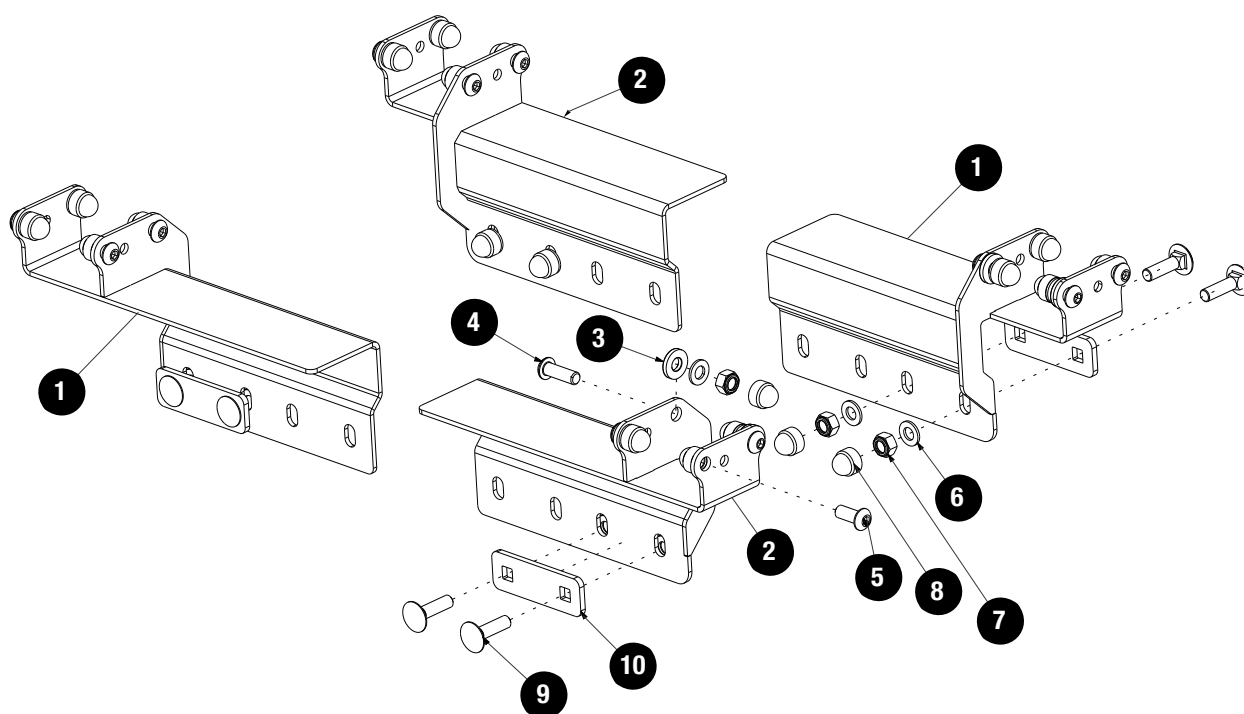


**1 GET ORGANIZED****IN THE BOX****PBRA001**

1	4 X	PRO BED RACK LEG
2	2 X	PRO BED RACK REAR BRACE
3	2 X	PRO BED RACK RH REAR WING BRACKET
4	2 X	PRO BED RACK TOP TRUSS
5	1 X	PRO BED RACK RH FRONT DIAGONAL BRACE
6	2 X	PRO BED RACK LH FRONT DIAGONAL BRACE
7	12 X	M6 NYLOC NUT
8	22 X	M6 NYLOC NUT
9	22 X	M6 NUT CAP
10	16 X	M8 x 20 BUTTON HEAD SCREW
11	16 X	M8 x 19 x 2 FLAT WASHER
12	16 X	M8 NYLOC NUT
13	16 X	M8 NUT CAP

IN THE BOX**PBRA001**

14	6 X	M6 x 12 BUTTON HEAD SCREW
15	2 X	FRONT HORIZONTAL BRACE
16	1 X	FRONT CENTER BRACE
17	4 X	M6 x 20 BUTTON HEAD SCREW
18	8 X	M6 x 12 x 1 FLAT WASHER
19	24 X	M6 x 25 THREAD FORMING SCREW
20	1 X	T30 6" TORX BIT

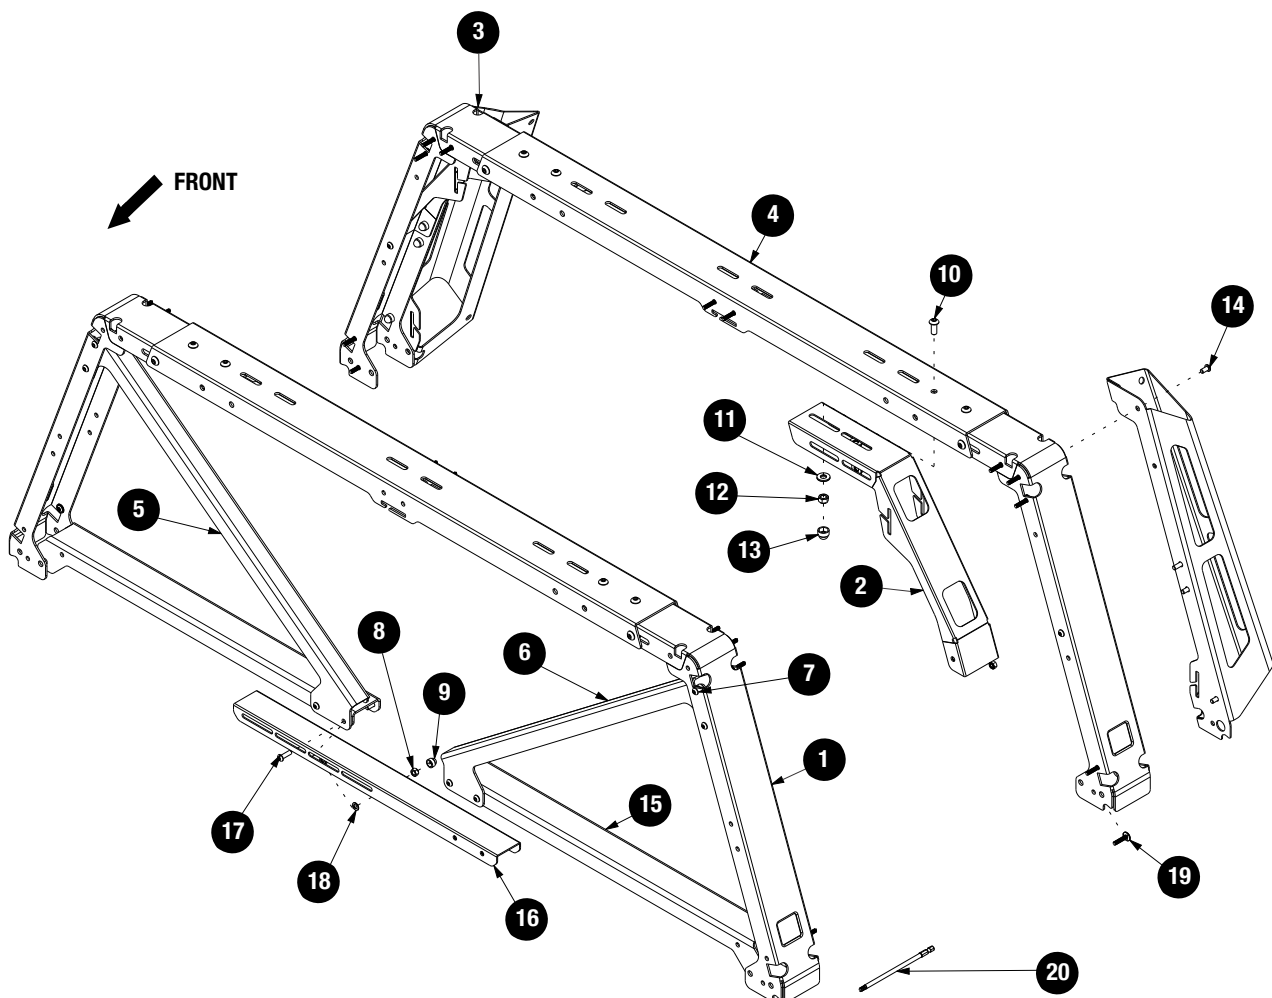TOOLS NEEDED



1


GET ORGANIZED

IN THE BOX


PBAL1250

1	2 X	Top Extrusion
2	1 X	Top Middle Extrusion
3	2 X	Bottom Extrusion
4	2 X	1250mm PSA Strip PE60

TOOLS NEEDED

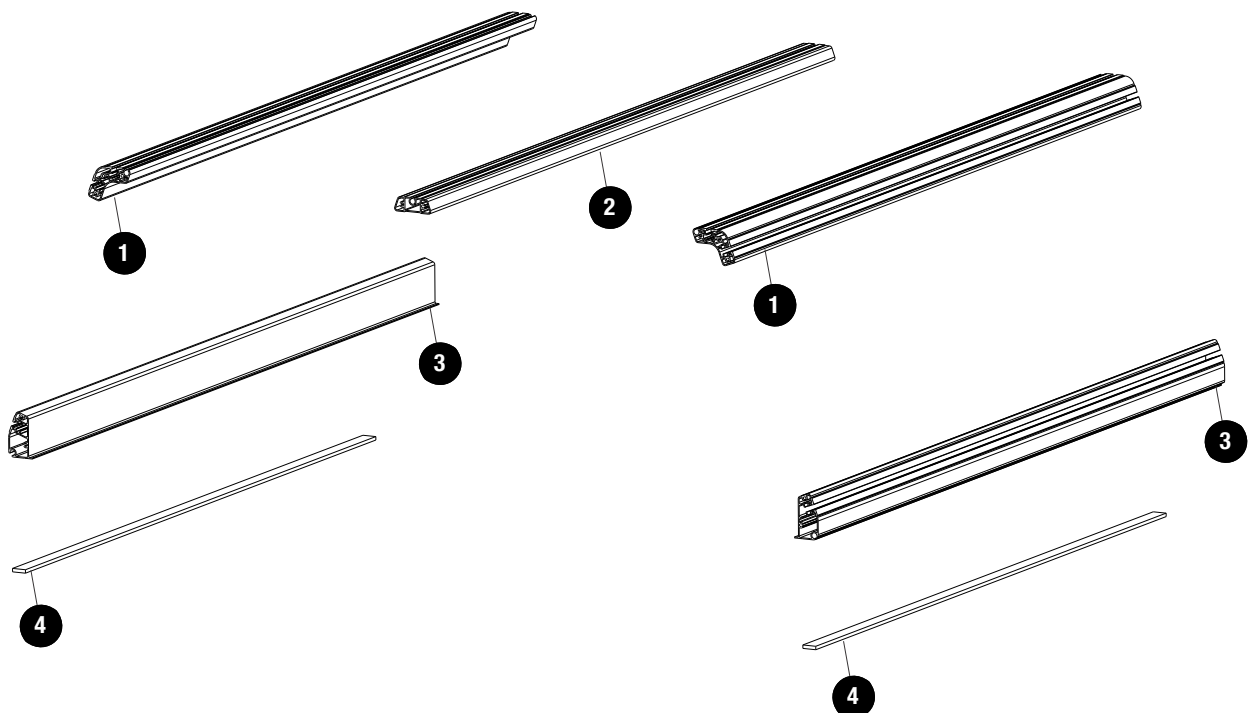

2.1

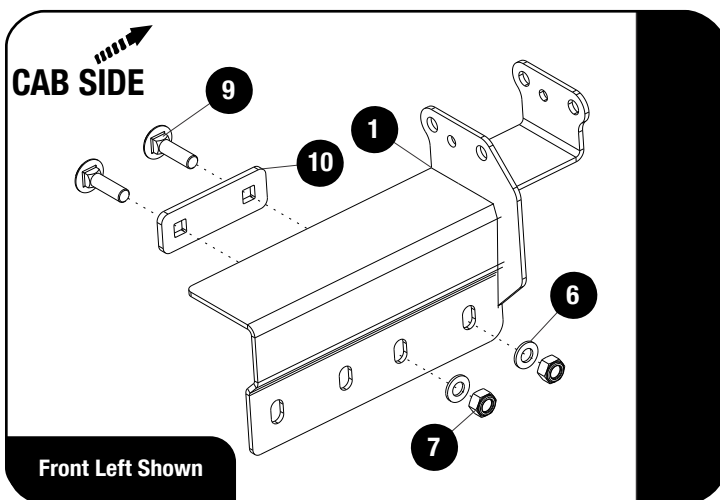


Remove the front factory Trail rail end caps. Slide 2 channel plates (Item 10) into each rail. Front LH side shown in Step 2.1

Loosely assemble the Front Mounting Brackets (Item 1) using the M8 carriage bolts, M8x16x1.6 Flat washer and M8 Nyloc Nut (Item 9,7 & 6).

Do this on both LH and RH side.

DO NOT FULLY TIGHTEN.

2.2

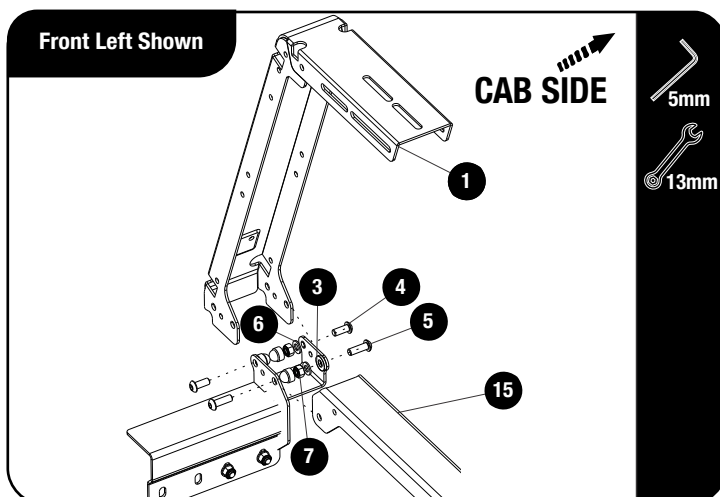


Assemble the Pro Bed Leg (Item 1) on page 3 and the Front Horizontal Support Bracket (Item 15) to the bracket fitted in 2.1 using M8 x 25 Button head bolts, M8 x 19 x 3 Flat washers and nyloc nuts (Item 3,5 & 7) as shown and M8 x 20 Button head bolts and M8 nyloc nuts (Item 4 & 6).

Do this on the Left and Right Side.

DO NOT TIGHTEN.

2.3

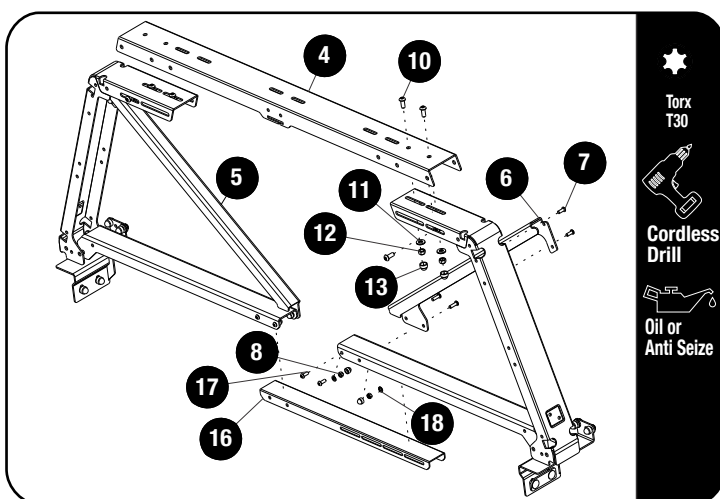

Assemble the Front diagonal and Horizontal Brace parts as shown (Item 5 & 6) to the legs fitted in 2.2 using the M6 x 16 Button head bolts M6 nyloc nuts (Item 7 & 8). FULLY TIGHTEN.


Assemble the Top Truss (Item 4) using M8 x 20 button Head Bolts M8 x 19 x 2 Flat Washers and M8 Nyloc Nuts (Item 10, 11 & 12).

FULLY TIGHTEN.

Use the M6 x 20 Button Head bolts M6 x 12 x 1 Flat Washer and M6 Nyloc Nut (Item 8,17 & 18) to fit the Front Center Brace (Item 16) to the LH and RH Front Horizontal Braces (Item 15).

DO NOT FULLY TIGHTEN.

2.4

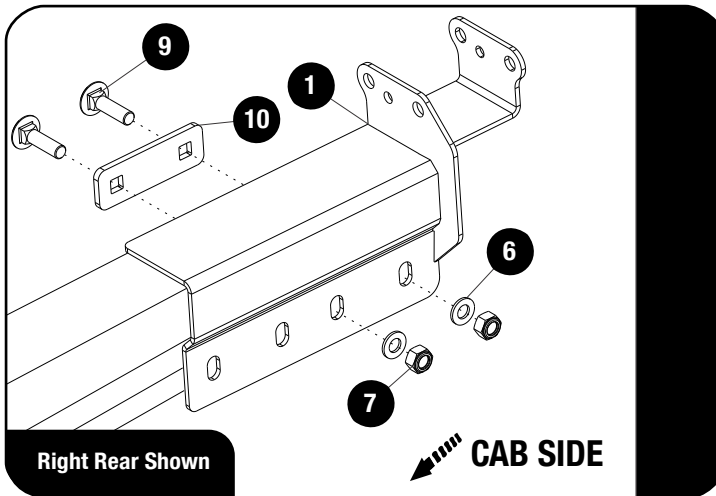


Remove the Rear factory rail end caps. Slide 2 channel plates (Item 10) into each rail. Rear RH side Shown in Step 3.2

Loosely assemble the Rear Mounting Brackets (Item 1) using the M8 carriage bolts, M8x16x1.6 Flat washer and M8 Nyloc Nut (Item 9, 7 & 6).

Do this on both LH and RH side.

DO NOT FULLY TIGHTEN.

2.5

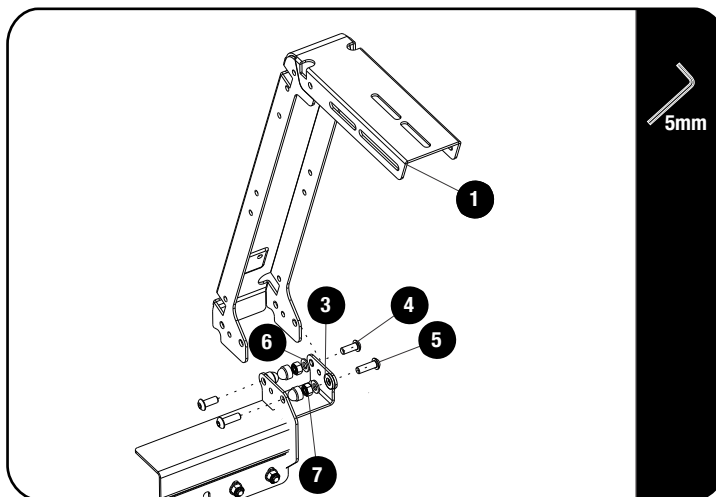


Fit the Pro Bed Leg (Item 1) assembled on page 3 to the bracket fitted in 2.1 using M8 x 25 Button head bolts, M8 x 19 x 3 Flat washers and nyloc nuts (Item 3, 5 & 7) as shown and M8 x 20 Button head bolts and M8 nyloc nuts (Item 4 & 6).

Do this on the Left and Right Side.


DO NOT TIGHTEN.

2.6

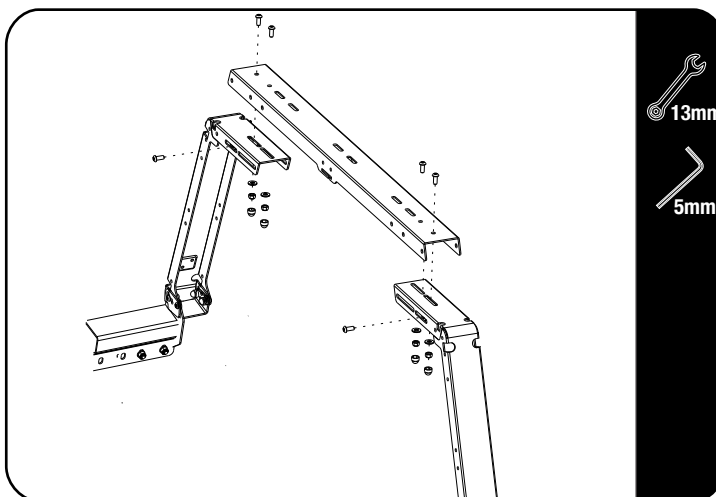

Loosely assemble the Top Truss to the leg assembly using the M8 x 20 Button head screws, M8 x 19 x 2 Flat washers and M8 Nyloc Nuts (Item 10, 10 & 12).

3.1

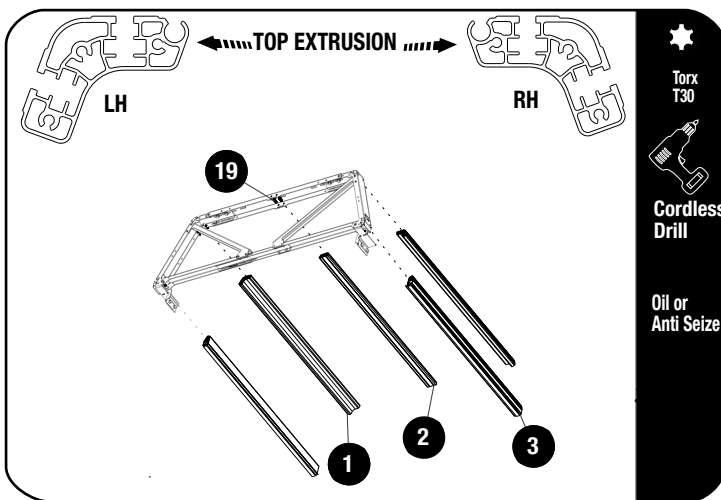

Slide the front leg and truss assembly assembled in STEP 2 backward to allow access for securing the extrusions.



Take note of extrusion orientation !

Using the supplied 6" T30 torx bit and a cordless driver assemble the extrusion using the M6x25 thread forming screws (Item 19). Use a slow and constant speed when using the cordless driver.




Use a little anti seize or oil on screw threads before inserting. Note these are Thread Forming Screws.

When complete slide assembly forward in the cargo rails giving room for rear legs to be assembled.



Tightening Torque 25Nm / 18.4 ft lbs

3.2

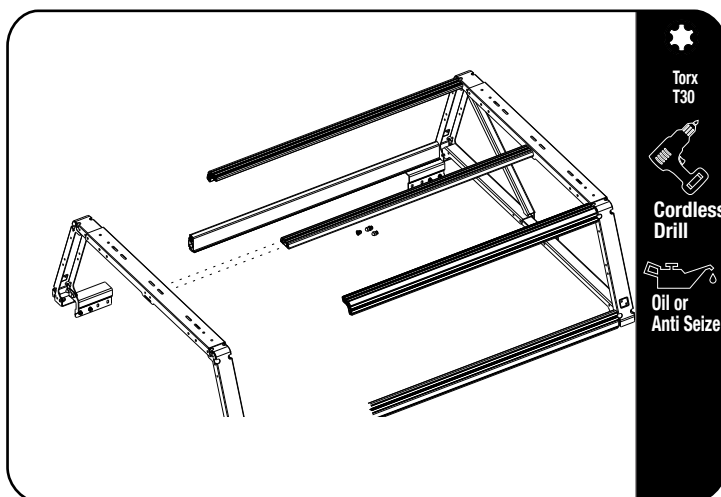

Pull the Front assembly with the extrusion toward the rear legs.

Align the extrusion with the holes in the rear legs and fasten with the M6 x 25 thread forming screws (Item 19).




Use a little anti seize or oil on screw threads before inserting. Note these are Thread Forming Screws.



Tightening Torque 25Nm / 18.4 ft lbs

3.3

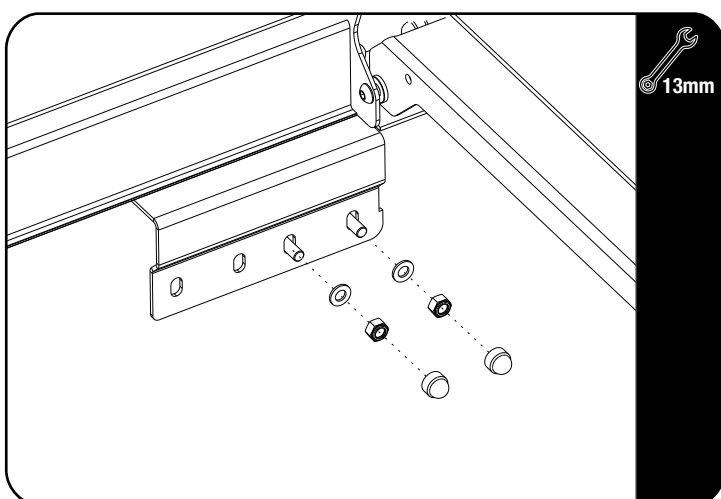

Slide the Pro Bed Rack assembly forward / backward and center into position over the bed and fully tighten the brackets onto the Trail Rails.

Place M8 nut caps over all M8 nuts.

With the Load Bed Rack in position fully tighten the bracket fitted in 2.1 & 2.5.


Place M8 Nut Caps onto the M8 Nyloc Nuts.



Tightening Torque:


M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

4.1

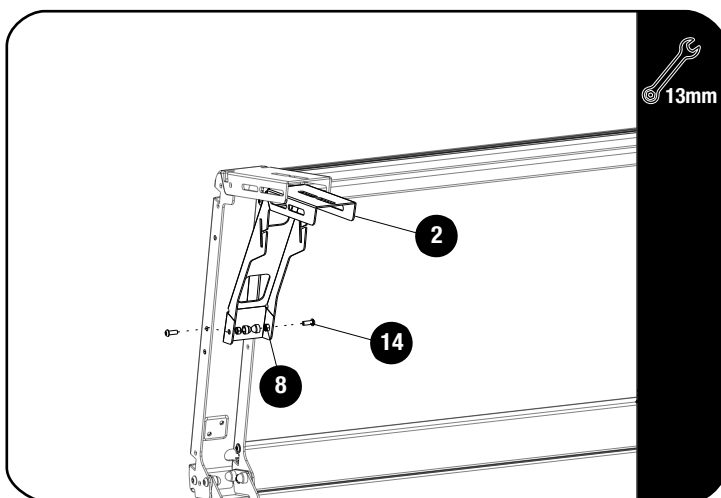

Loosely assemble the M6 x 12 Button Head bolts, M6 x 12 x 1 Flat Washers and M6 Nyloc nuts (Item 2 , 4 & 18).DO NOT FULLY TIGHTEN.


4.2

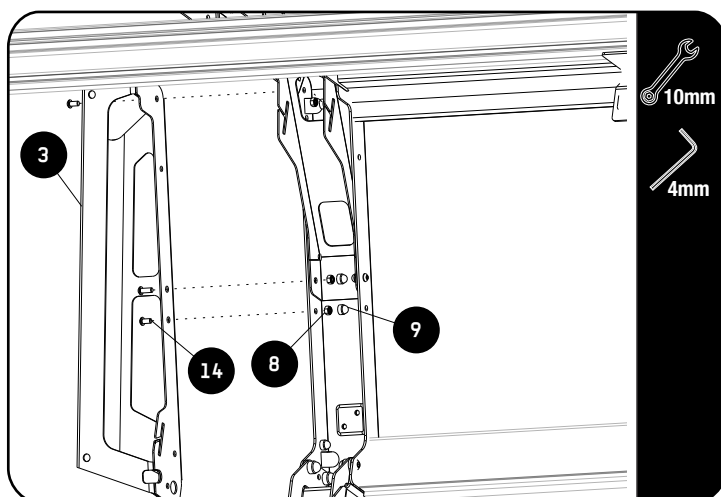

Assemble the Rear Wing Brackets (Item 3) to the back of the frame using the M6 x 12 button head screws, M6 x 12 x 1 Flat washers and M6 Nyloc nuts (Item 14 , 8 & 18).

Fully Tighten and Place M6 Nut Caps (Item 9)over the M6 Nyloc Nuts.

4.3

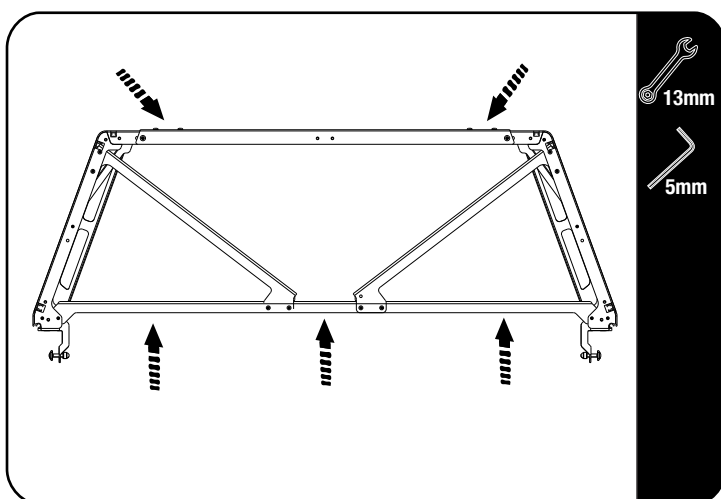


Using clamps and a spirit level clamp the spirit level to the inside of the Front Center Brace and Tighten the M8x20 Button head screws and M8 Nyloc Nuts fitted in 2.3.

Place M6 Nut caps on the M6 Nyloc Nuts.

Fully tighten the top M8 button head bolts

4.5

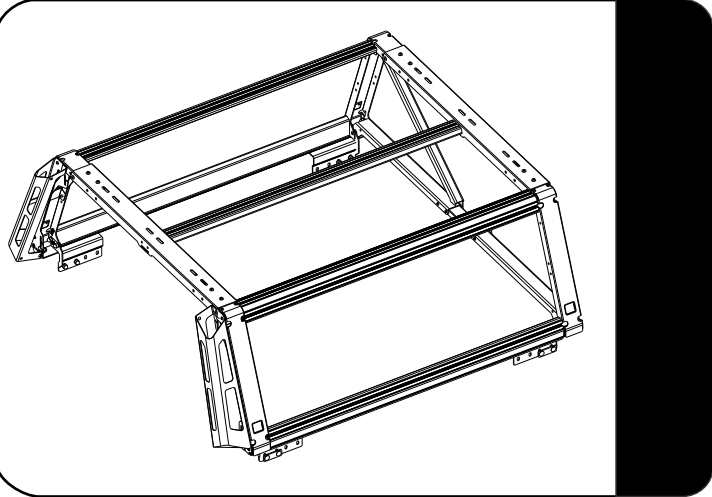

Fully Tighten all the bolts and place Nut Caps where needed.

5

COMPLETION

5.1

Congratulations! You did it. Take a step back and admire your work!



6

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    